



821

826

Parts List for PXRA2676 Type 1

Item Number	Part Number	Description	Qty Required
1	5140187-26	CORD SET	1
2	5140187-27	CORD PROTECTOR	1
3	5140187-28	SELF TAPPING SCREW	2
4	5140187-29	CORD CLAMP	1
5	5140187-30	SWITCH	1
6	5140187-31	PCB	1
7	5140187-32	HOUSING	1
8	5140136-60	SCREW	12
10	5140187-34	ARMATURE ASSY.	1
11	5140187-33	BEARING	1
12	5140187-35	GEAR	1
13	5140187-36	SHAFT	1
14	5140187-37	GEAR BOX COVER	1
15	5140187-38	SELF TAPPING SCREW	5
21	5140187-39	OUTPUT SHAFT ASSY.	1
22	5140187-40	ROLLER	2
23	5140207-23	REAR COVER ASSY.	1
28	5140207-23	REAR COVER ASSY.	1
29	5140187-43	BEARING	2
30	5140187-44	FIELD	1
31	5140136-46	BALL BEARING	1
32	5140187-45	SELF TAPPING SCREW	2
33	5140187-46	LATCH	2
34	5140187-47	SELF TAPPING SCREW	4
35	5140187-48	CARBON BRUSH	2
36	5140187-49	BRUSH HOLDER	2
37	5140187-50	END CAP	1

Parts List for PXRA2676 Type 1

Item Number	Part Number	Description	Qty Required
38	5140136-60	SCREW	3
39	5140187-51	TERMINAL BLOCK	1
821	5140187-55	WARNING LABEL	1
821	5140187-56	WARNING LABEL	1
821	5140187-52	ID LABEL	1
821	5140187-54	WARNING LABEL	1
826	5140187-53	RATING LABEL	1