


RIDGID
Jig Saw
Model No. R8832
Repair Sheet


RIDGID
Scie sauteuse
No. de modèle R8832
Feuille de réparation

RIDGID
Sierra de vaivén
Número modelo R8832
Listas de piezas de repuesto

RIDGID R8832

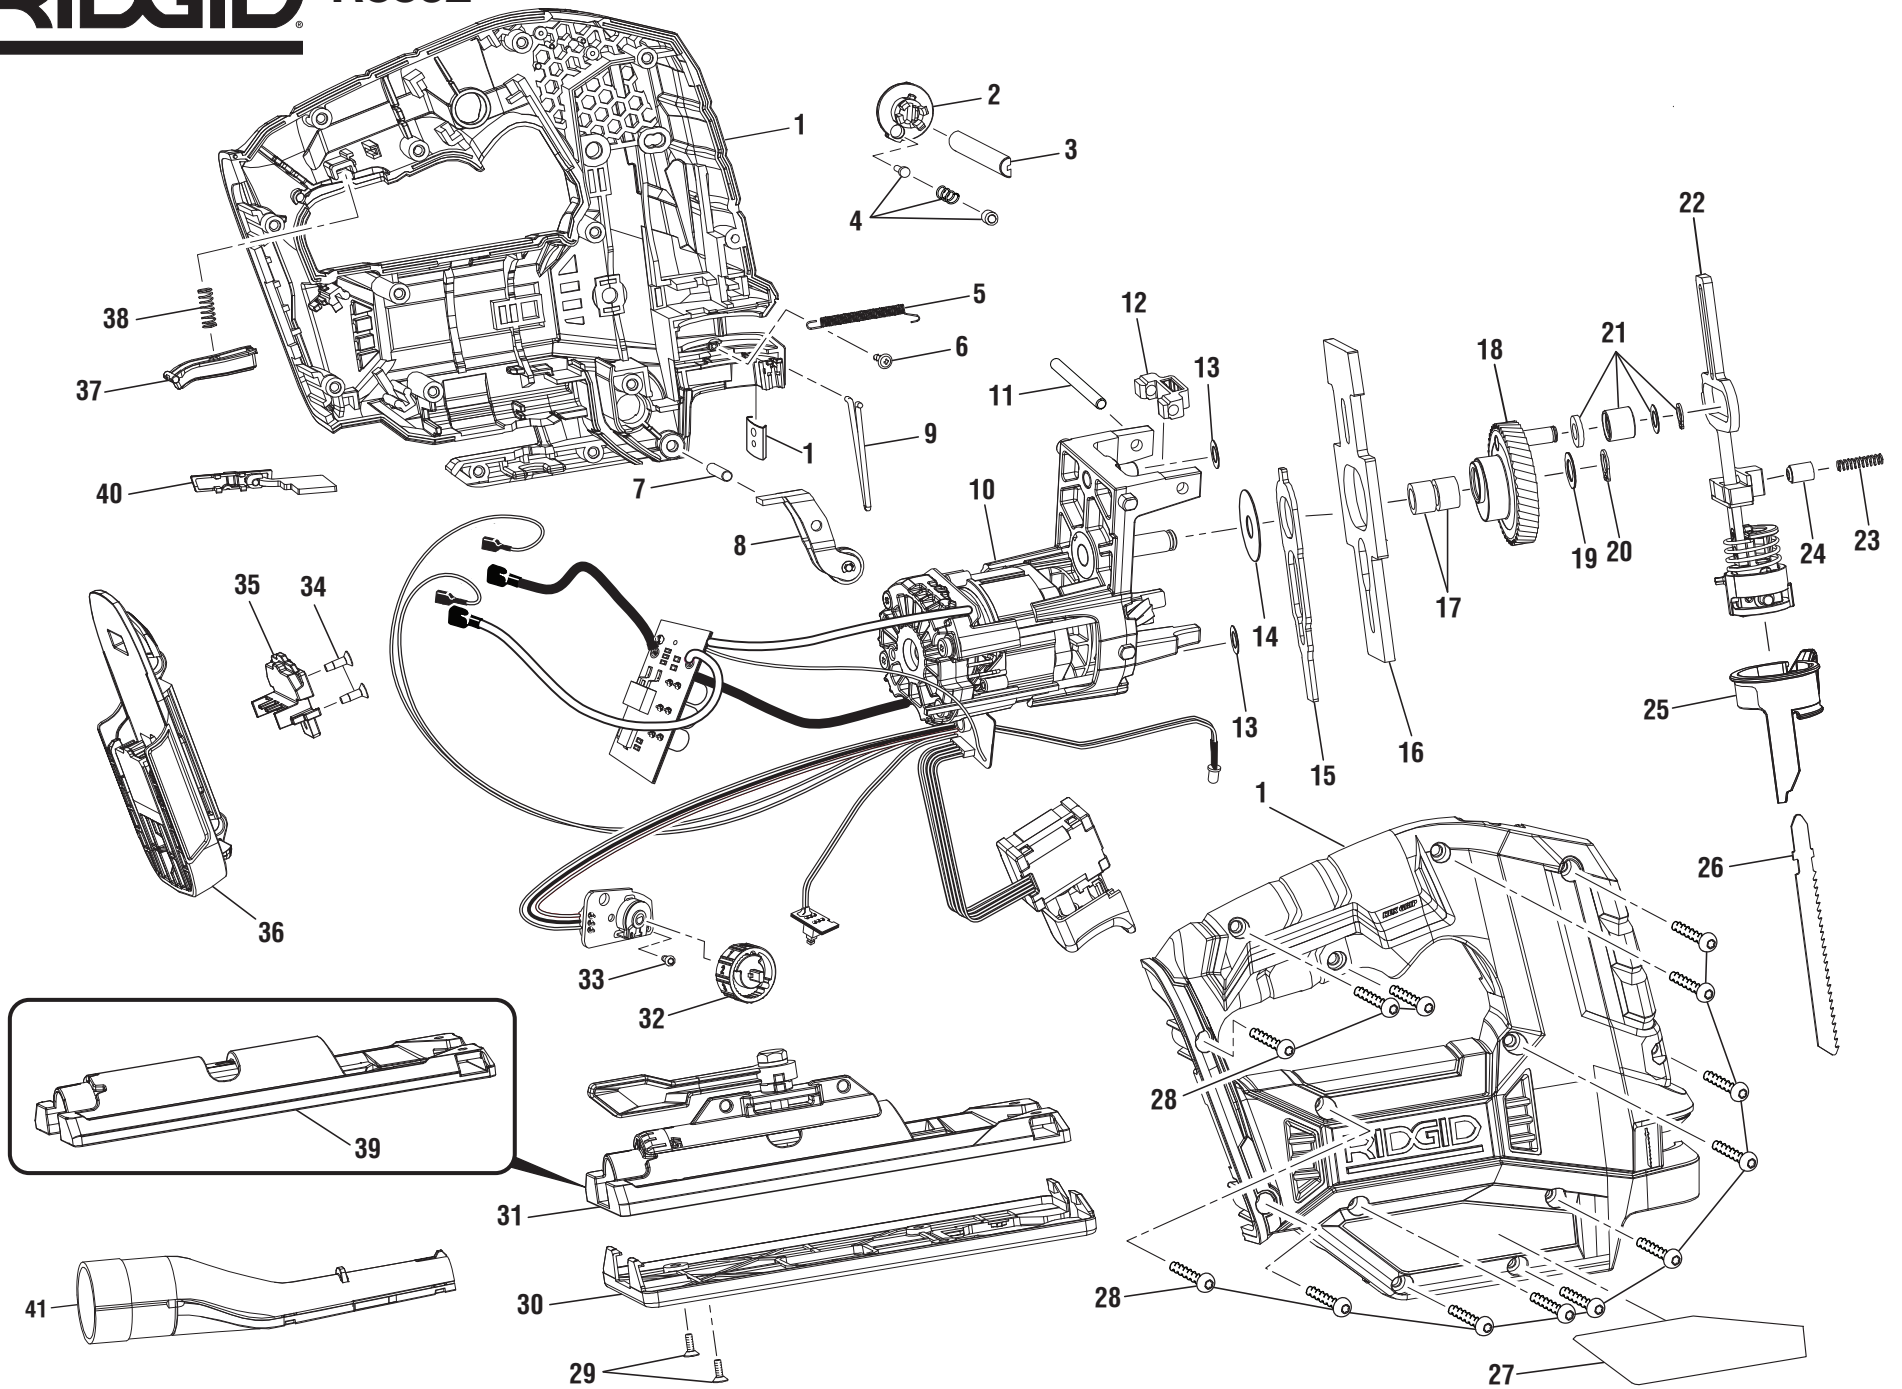

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	204601003	Housing Assembly	1	23	697080001	Compression Spring	1
2	531863001	Orbital Knob	1	24	613286001	Saw Bar Sleeve	1
3	613288001	Orbital Adjustment Lever	1	25	643340001	Blade Release Lever	1
4	301146002	Resilient Assembly	1	26	690227099	Blade (Wood).....	1
5	696767001	Extension Spring	1	27	941122049	Data Label	1
6	660214002	Screw (M2 x 4 mm, Pan Washer Hd.)	1	28	660024044	Screw (M4 x 16 mm, T20 Torx Pan Hd.)	13
7	673814002	Pin (D4 x 25.5 mm).....	1	29	660228016	Screw (M3 x 8 mm, Flat Hd.)	2
8	312418001	Roller Assembly	1	30	533098001	Cover.....	1
9	634964004	Guard	1	31	204601005	Base Assembly (Inc. Key No. 39).....	1
10	206808001	Motor and Switch Assembly	1	32	204601006	Speed Dial Assembly	1
11	673776001	Pin (OD5 x 50 mm).....	1	33	662436003	Screw (M2.3 x 9 mm, T8 Torx Pan Hd.)	1
12	613175001	Bushing	1	34	660204008	Screw (M3 x 10 mm, Flat Hd.)	2
13	670914001	Washer (OD11 x ID6.2 x 0.3t).....	2	35	532760001	Foot Cover	1
14	631669001	Washer (OD28 x ID8 x 0.3t).....	1	36	360759006	Foot.....	1
15	637637001	Drive Plate.....	1	37	591119001	LED Button.....	1
16	614273001	Balance Block	1	38	692688001	Compression Spring	1
17	680727009	Needle Bearing	2	39	643207001	Base	1
18	613292001	Gear	1	40	204601009	Dust Blower Assembly	1
19	691101001	Washer (OD14 x ID8.2 x 0.5t).....	1	41	314115001	Dust Port Assembly	1
20	639947001	Retaining Ring	1				
21	204601004	Drive Bushing Assembly	1				
22	312176003	Saw Bar	1				
					NOT SHOWN:		
					995000420	Operator's Manual (961152956)	
					4-22-20		
					(Rev:05)		

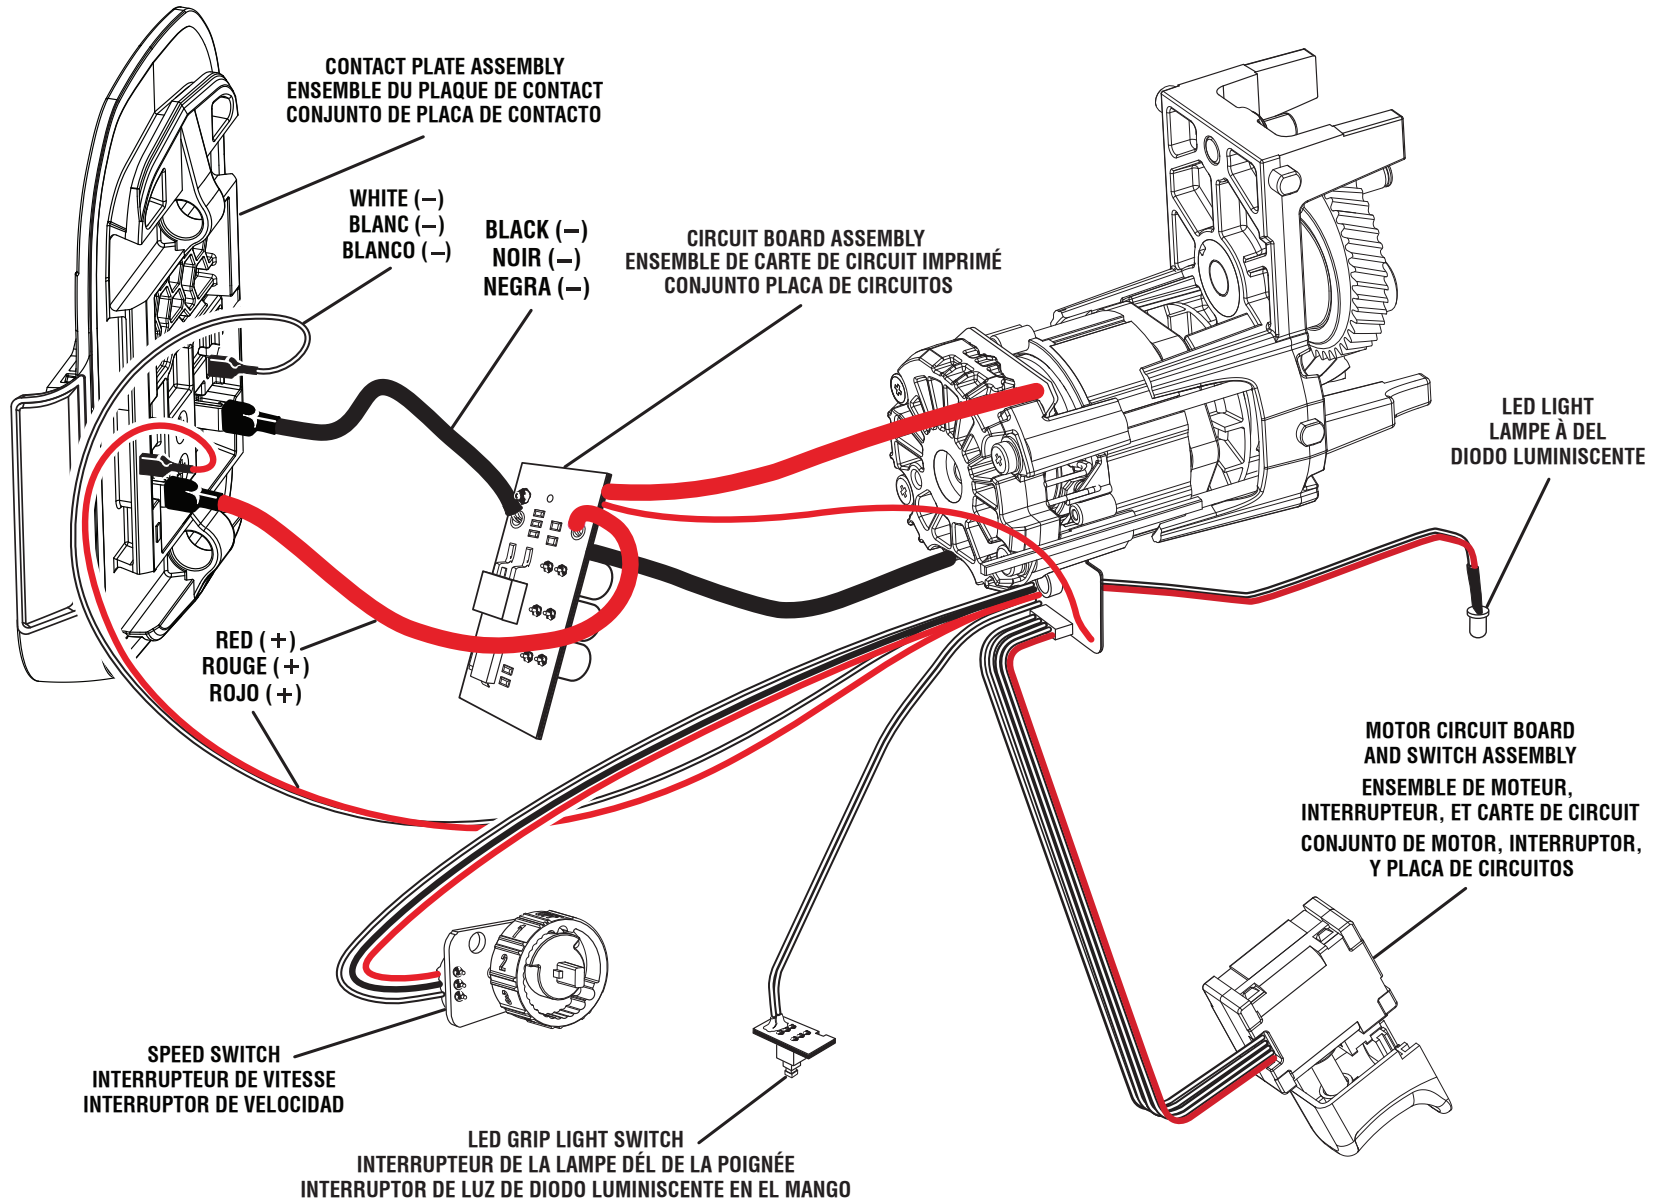

WIRING DIAGRAM / SCHEMA DE CABLAGE / DIAGRAMA DE CABLEADO