


## RYOBI DIGITAL CAMERA – MODEL NO. RP4200

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **DIGITAL CAMERA** or when ordering replacement parts.

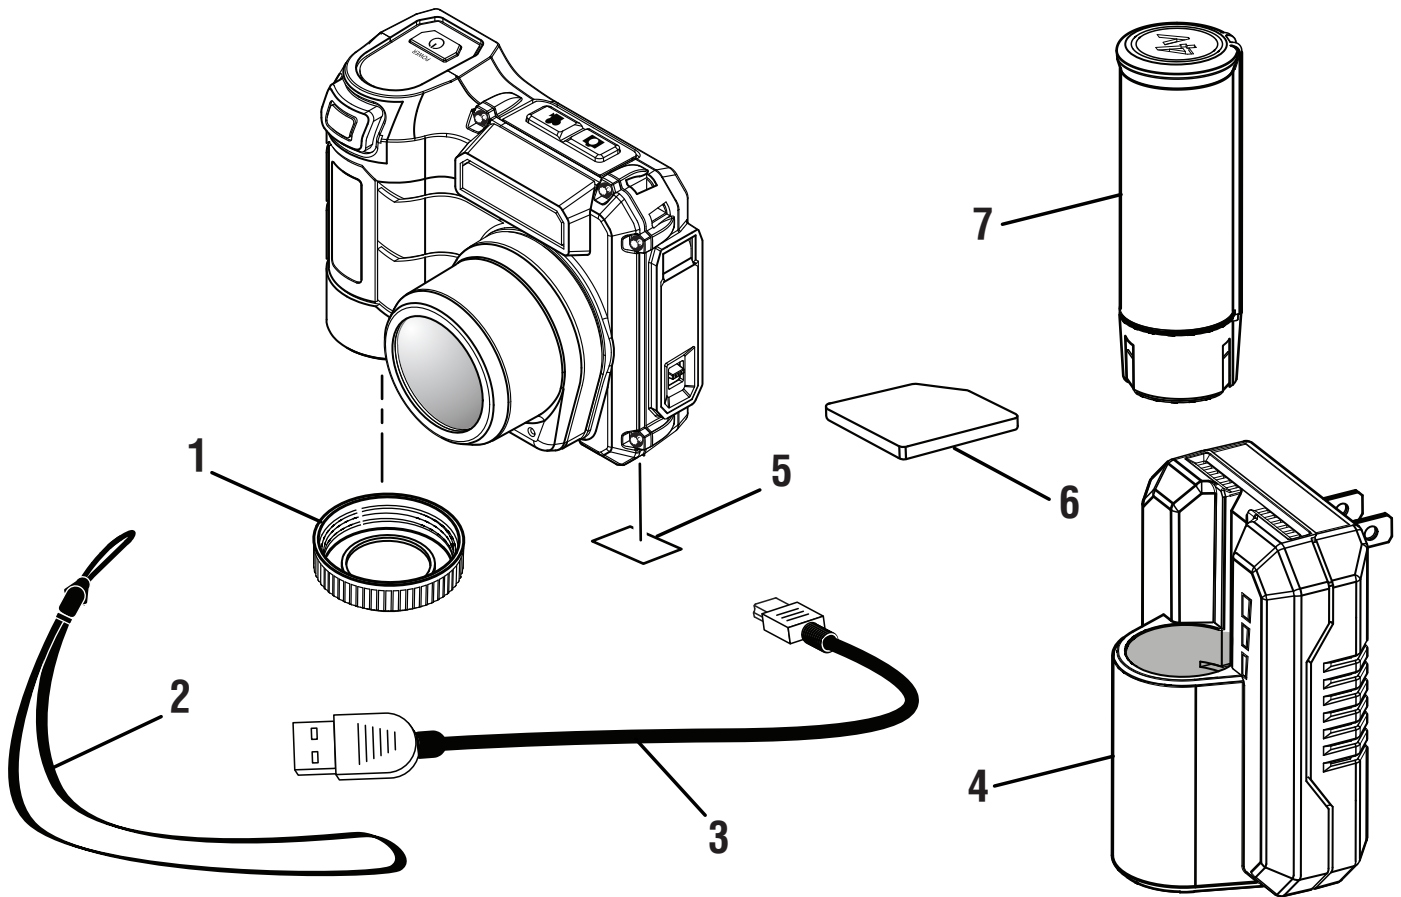

### PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	019609001009	Battery Cap Assembly.....	1	<b>NOT SHOWN:</b>			
2	019609001072	Lanyard.....	1	019609001095	Nylon Bag.....	1	
3	019609001070	USB Cable.....	1	987000654	Operator's Manual (AP4700) ...	1	
4	140129002	Charger (AP4700, 4 Volt Li-ion).....	1	987000668	Operator's Manual (RP4200) ...	1	
5	019609001075	Data Label .....	1	987000706	Operator's Manual (AP4001) ...	1	
6	019609001071	SD Card.....	1	6-30-09 (REV:00)			
7	130166003	Battery Pack (AP4001, 4 Volt Li-ion).....	1				