


## RYOBI 4 VOLT DIGITAL KEY LOCK BOX – MODEL NO. RP4310

The model number will be found on the key lock box. Always mention the model number in all correspondence regarding your **DIGITAL KEY LOCK BOX** or when ordering replacement parts.

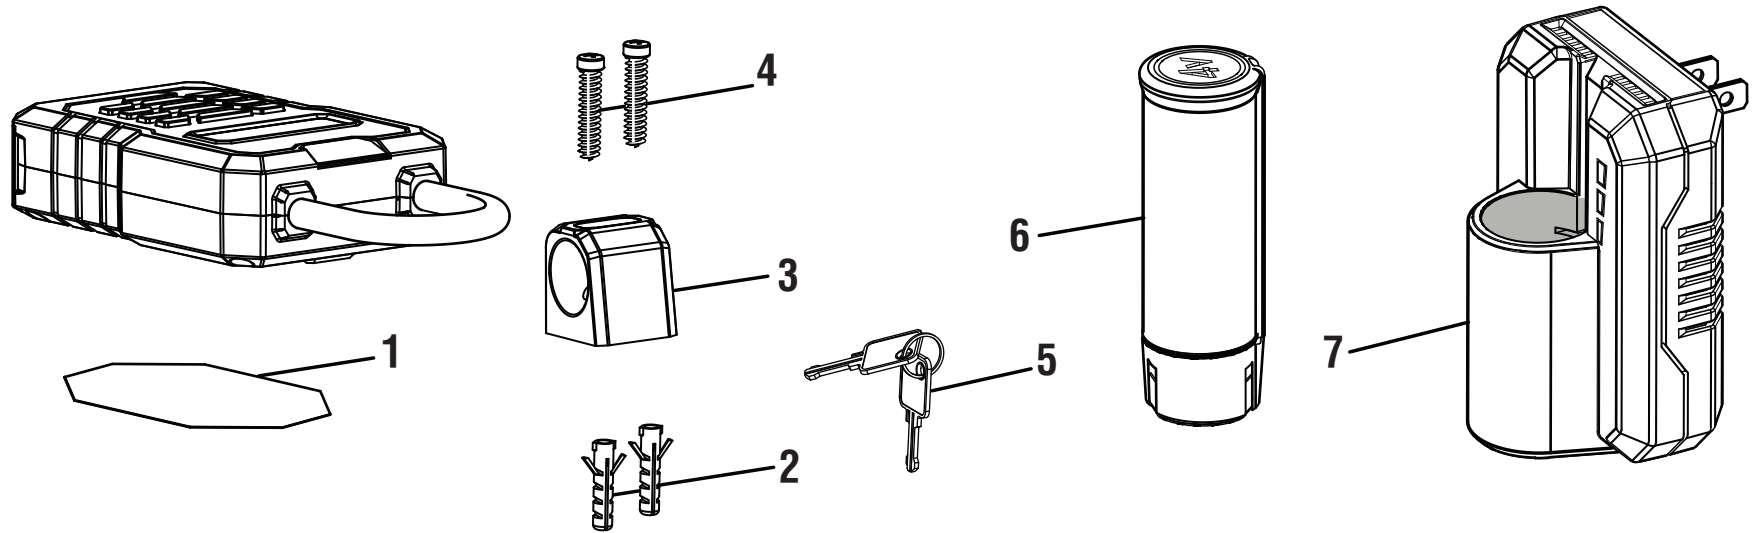

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	83-410-001R00	Data Label.....	1
2	67-215-001R000	Wall Anchor.....	2
3	52-410-008R000	Mounting Bracket.....	1
4	51-110-225R000	Screw (M5 x 9 mm).....	2
5	52-410-KEYR801	Key, Silver 801.....	2
6	130166003	Battery Pack (AP4001, 4 Volt Li-ion).....	1
7	140129002	Charger (AP4700, 4 Volt Li-ion).....	1
	52-410-KEYR802	Key, Silver 802	
	52-410-KEYR803	Key, Silver 803	
	52-410-KEYR804	Key, Silver 804	
	52-410-KEYR805	Key, Silver 805	
	52-410-KEYR806	Key, Silver 806	
	52-410-KEYR807	Key, Silver 807	
	52-410-KEYR808	Key, Silver 808	
	52-410-KEYR809	Key, Silver 809	
	52-410-KEYR811	Key, Silver 811	
	52-410-KEYR813	Key, Silver 813	

KEY NO.	PART NUMBER	DESCRIPTION	QTY.
	52-410-KEYR814	Key, Silver 814	
	52-410-KEYR815	Key, Silver 815	
	52-410-KEYR816	Key, Silver 816	
	52-410-KEYR817	Key, Silver 817	
	52-410-KEYR818	Key, Silver 818	
	52-410-KEYR819	Key, Silver 819	
	52-410-KEYR820	Key, Silver 820	
<b>NOT SHOWN:</b>			
	987000662	Operator's Manual.....	1
	11-18-10 (REV:02)		