


17A & 17B
(AS NEEDED)

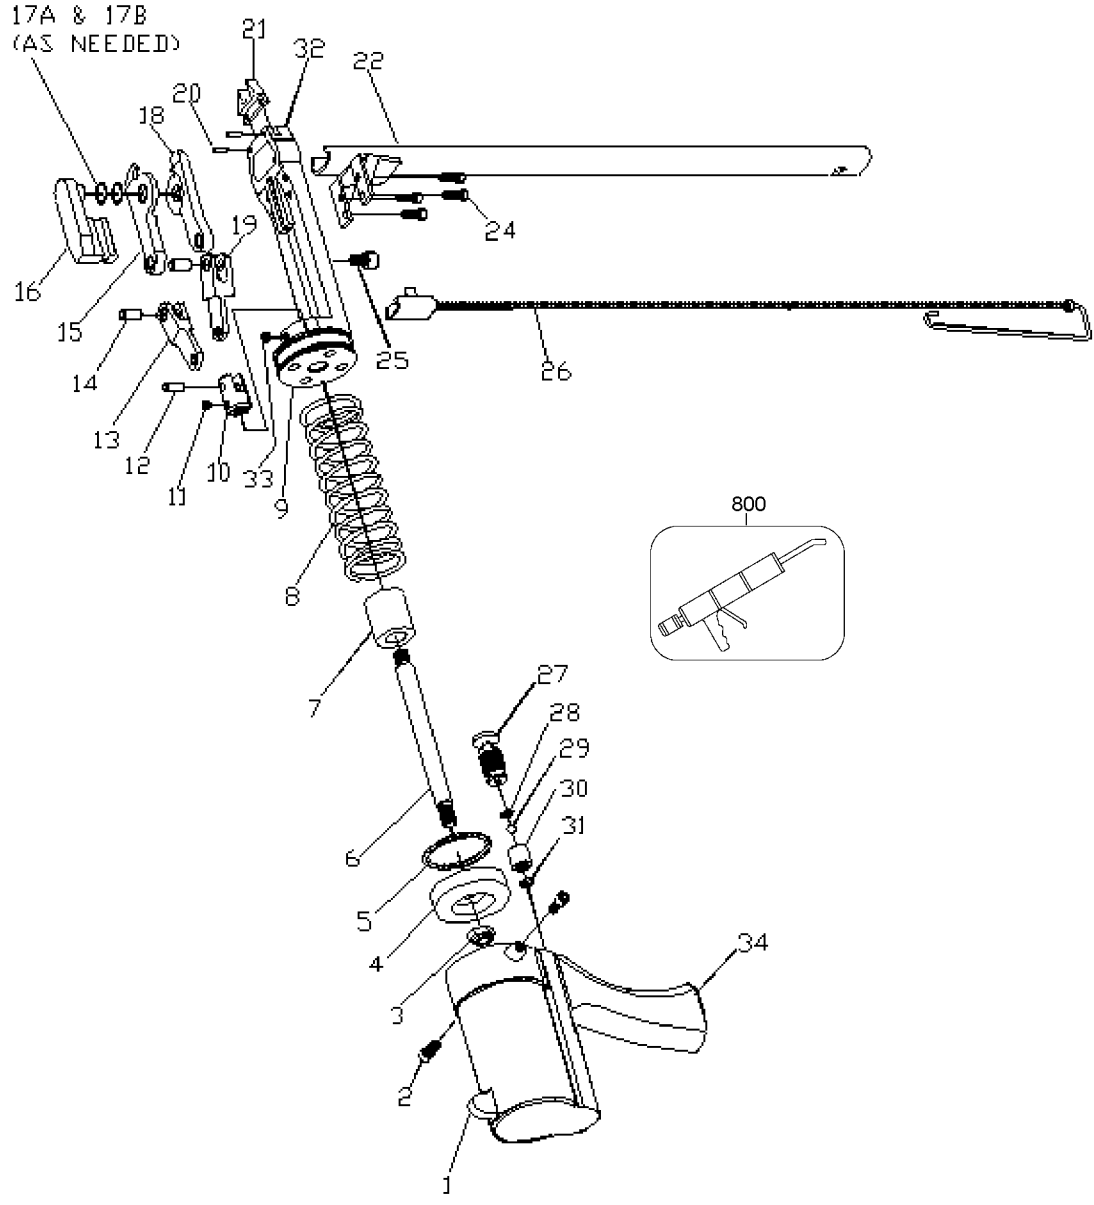

Parts List for TR201 Type 0

Item Number	Part Number	Description	Qty Required
1	501201-S	PISTOL GRIP (HOUSING	1
2	TL710210	SOCKET HEAD CAP SCRE	2
3	TR105004	NUT- PISTON ROD	1
4	TR105006	PISTON	1
5	TR105005	O RING- PISTON	1
6	TR105008	PISTON ROD	1
7	TR105009	SPACER BUMPER	1
8	TR105007	SPRING PISTON RETURN	1
9	TR105012	SPACER- FRONT STOP	1
10	TR105013F	CLEVIS FINISHED	1
11	TR105015	CLEVIS LOCK SCREW	1
12	TR105014	SPIRAL PIN	1
13	TR105016F	ARM LINK LEFT	1
14	TR105020	JAW PINS	2
15	TR105018F	JAW LEFT	1
16	TR105021F	SLIDE	1
17	TR105028A	WASHER- WAVY	1
17	TR105028B	WASHER- CUP	1
18	TR105019F	JAW RIGHT	1
19	TR105017F	ARM LINK RIGHT	1
20	TR105026	TEETH- ROLL PIN FOR	2
21	TR105025F	TEETH- REPLACEABLE	1
22	TR417051F	ASSY- MAGAZINE SHORT	1
23	TL726000	#6 SPLIT LOCKWASHER	4
24	TL716208	SOC HD CAP SCREW W/P	4
25	TL714206	CAP SCREW	1
26	TR105A027F	ASSY- PUSHER SHORT B	1

Parts List for TR201 Type 0

Item Number	Part Number	Description	Qty Required
27	501410	AIR VALVE ASSEMBLY	1
28	TL620035	VALVE BALL SEAL O-RI	1
29	501254	VALVE BALL	1
30	501213	VALVE BALL RETAINER	1
31	SC08	O RING	1
32	TR109024AF	CARRIAGE BODY	1
33	TR105022	SCREW- LOCK	1
34	C04044	GRIP- PISTOL HOUSING	1
90	159919	LABEL-WARNING-MIIICN	1
800	100653	LUBE (2CC)	1
800	100679	LUBE (1LB.CAN)	1