



Parts List for TV200 Type 1

Item Number	Part Number	Description	Qty Required
1	148331-03	MOTOR	1
2	148579-00	PINION	1
3	000000-00	No Longer Available	1
4	000000-00	No Longer Available	1
5	148345-01	SPINDLE & GEAR	1
6	000903-00	BALL	1
7	149518-01	SCREW	1
8	135420-00	BEARING,SPHER.	2
9	140656-00	PIN,ROLL	1
10	607918-41	SCREWDRIVER BIT	1
11	144088-00	CLIP	1
12	148338-00	PLATE,THRUST	1
13	148354-03	BIT CLIP	2
14	148373-00	GEAR	1
15	418337-15	CHARGER	1
16	330019-00	SCREW	8
17	283186-00	CHUCK & KEY	1
18	330034-00	KEY,CHUCK	1
19	148343-03	TRIGGER	1
20	148344-00	LEVER,REV.	1
21	148353-00	LOCK,TRIGGER	1
22	148367-00	BUTTON,REV.	1
23	000000-00	No Longer Available	1
800	761995-01	GREASE, 6 OZ.	1
800	283484-01	GREASE,32 OZ.	1
861	499124-05	KIT BOX	1