



18 Volt Cordless Chain Saw UT-34010 34010-UT 18 Volt Cordless Chain Saw UT-34010 18 Volt Cordless Chain
Saw - 18 Volt Cordless Chain Saw

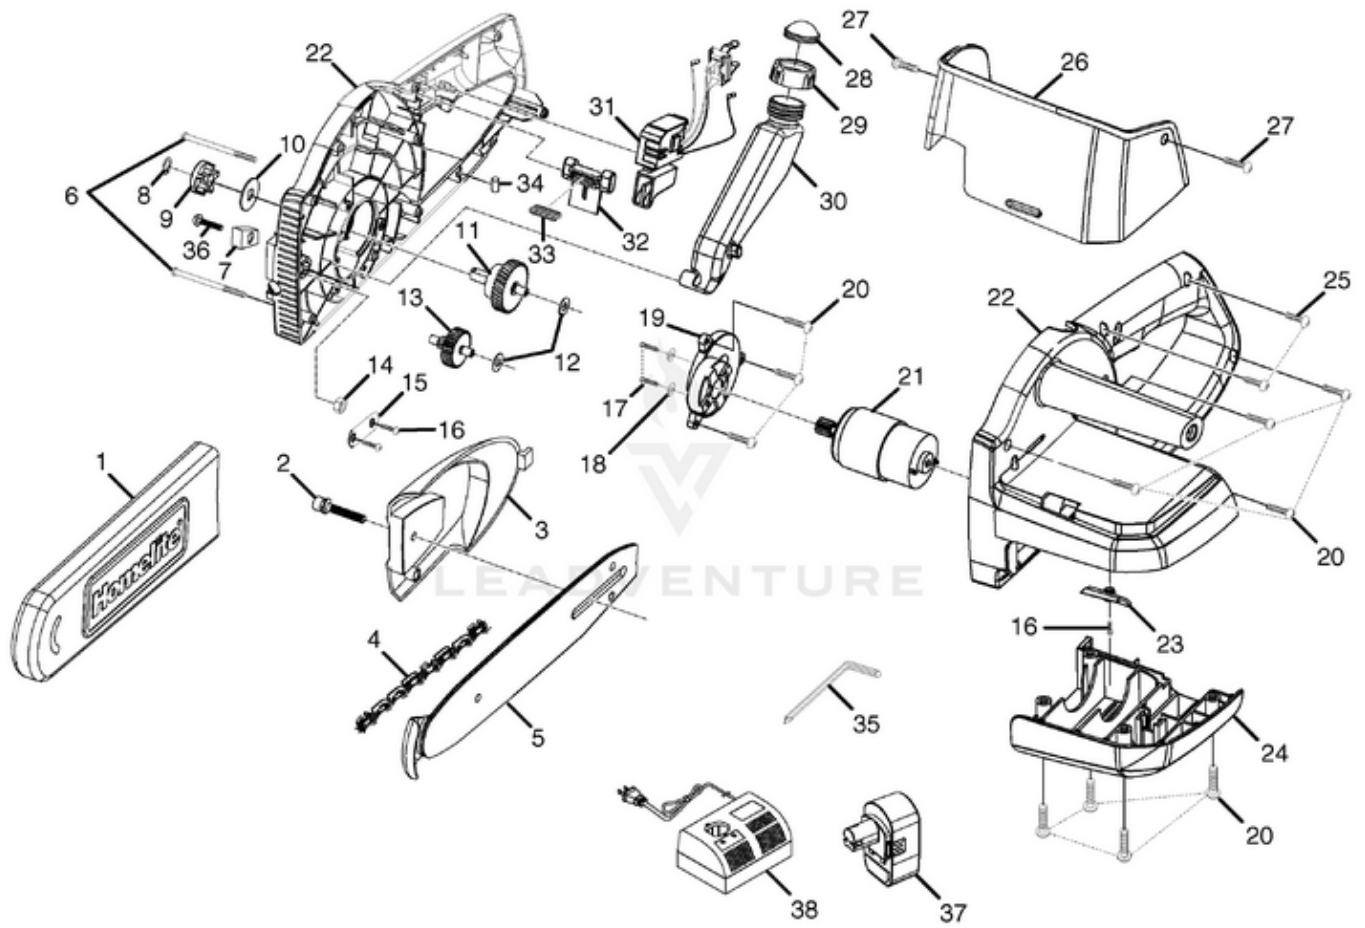

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	5836301	GUARD	1
2	6605802	SCREW	1
3	2019301	SPROCKET GUARD	1
4	6958301	CHAIN, (90JG-040)	1
5	6222001	CHAIN BAR (10 in)	1
6	6623704	SCREW (M4 X 66 mm)	2
7	900162004	FELT SEAL	1
8	6760802	C-RING	1
9	6132301	SPROCKET	1
10	6973301	COVER PLATE	1
11	3000343	OUTPUT SHAFT ASSEMBLY	1
12	6906001	WASHER	2
13	3000342	OUTPUT SHAFT ASSEMBLY	1
14	6819602	NUT (M6)	1
15	6985701	STEEL PLATE	1
16	6600506	BEARING RETAINER SCREW	3
17	6621211	SCREW (M4 X 12 mm)	2
18	6703001	SPRING WASHER	2
19	3076501	MOTOR MOUNTING ASSEMBLY	1
20	6620803	SCREW (M4 X 22 mm PAN HD)	11
21	2307404	MOTOR ASSEMBLY	1
22	5949701	MOTOR HOUSING SUPPORT	1
23	5958401	WIND PLATE	1
24	2019201	LOWER MOTOR HOUSING	1
25	6620805	SCREW (M4 X 16 mm PAN HD)	2
26	200201001	FRONT HANDLE GUARD W/LABELS	1
27	6620604	SCREW (M35 X 25 mm)	2
28	5950801	PRIMER BULB	1
29	5950701	SCREW CAP	1
30	5836201	OIL TANK	1
31	2701520	SWITCH ASSEMBLY	1
32	5217313	SAFETY KNOB	1
33	6799802	SPRING	1
34	5621901	CONTACT PLATE STOPPER	1
35	6800203	HEX KEY (5mm)	1
36	660200002	SCREW (M23 X 6 mm)	1
37	1323701	BATTERY	1
38	1425701	BATTERY CHARGER	1
	983000113	OPERATORS MANUAL - UT31840	
	983000-113R	REPAIR SHEET	

18 Volt Cordless Chain Saw UT-34010 34010-UT 18 Volt Cordless Chain Saw UT-34010 18 Volt Cordless Chain Saw - Wiring Diagram

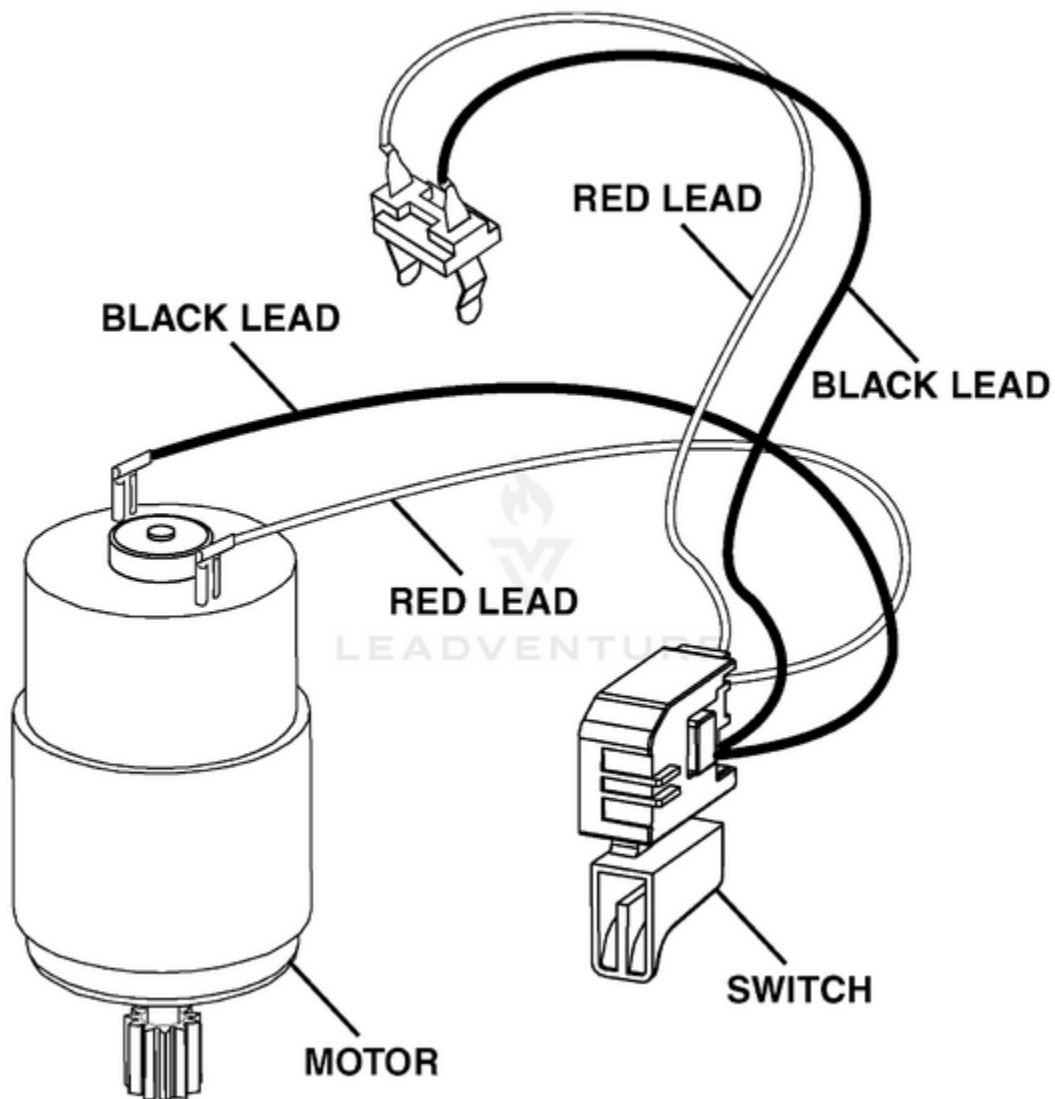

Rendered by LeadVenture, Inc.