



BOSCH

Battery Vacuum Cleaner

VAC | 3 603 CD7 080

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description	Illustration	Price	Quantity	Price Group
2	1 619 PB3 872	DC motor	1	-	1	
3	1 619 PB3 105	Electronic Board	1	-	1	
4	1 600 A01 61V	Switch Button	1	-	1	
5	1 619 PB4 043	fixing plate	1	-	1	
6	1 619 PB3 873	Holding Plate	1	-	1	
7	1 619 PB3 874	Rubber Pad	1	-	2	
9	1 619 PB3 876	Button	1	-	1	
10	1 619 PB3 877	Spring	1	-	1	
11	1 619 PB3 879	Rubber Ring	1	-	1	
12	1 619 PB3 880	Screw	1	-	2	
15	1 619 PB3 835	Filter	1	-	1	
17	1 619 PB3 836	Filter	1	-	1	
18	1 619 PB3 882	Clip	1	-	2	
19	1 619 PB3 985	Spring	1	-	1	
20	1 619 PB4 044	Pressure cap	1	-	1	
21	1 619 PB4 049	Screw	1	-	4	
91	1 607 A35 08W	Battery Pack PBA 3,6V 4,0Ah	1	-	1	
651	1 619 PB3 868	Crevice Nozzle	1	-	1	
653	2 609 120 713	Charger EU 100-240V 5V 1A	1	-	1	
801	1 619 PB3 911	Housing	1	-	1	
808	1 619 PB4 047	Nameplate	1	-	1	
816	1 605 411 01T	Dust container	1	-	1	

* Prices shown are suggested retail prices

Illustration - Type - E

3 603 CD7 000
 Issue | 22-03-11
 Stand | **Fig./Abb. 1**

