



Model XCS04ZK Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty Unit
001	183C36-3	HOUSING SET	1 PC.
	C10 263005-3	RUBBER PIN 6	2 PC.
	D10	INC. 97	
002	620283-2	LED CIRCUIT	1 PC.
003	266130-9	TAPPING SCREW BIND PT 3X16	9 PC.
004	455011-4	REAR COVER	1 PC.
005	619336-2	ROTOR	1 PC.
006	629116-8	STATOR COMPLETE	1 PC.
007	455005-9	MOTOR BRACKET	1 PC.
008	256375-7	ROD 3	2 PC.
009	253401-3	FLAT WASHER 18	1 PC.
010	221558-8	INTERNAL SPUR GEAR 41	1 PC.
011	226193-7	SPUR GEAR 13	5 PC.
012	144591-2	CARRIER COMPLETE	1 PC.
013	422168-6	RUBBER SEAL	1 PC.
014	455006-7	GEAR CASE	1 PC.
015	911017-7	PAN HEAD SCREW M3X12	4 PC.
016	253888-9	FLAT WASHER 25	1 PC.
017	961055-9	RETAINING RING S-15	1 PC.
018	211234-2	BALLBEARING 6902LLB	1 PC.
019	319616-3	GEAR HOUSING	1 PC.
020	266326-2	TAPPING SCREW 4X18	4 PC.
021	211233-4	BALL BEARING 6802LLB	1 PC.
022	326996-0	SPINDLE	1 PC.
023	650710-5	SWITCH C3JW-4B	1 PC.
024	643874-2	TERMINAL	1 PC.
025	451162-1	LOCK LEVER	1 PC.
026	457799-2	COVER	1 PC.
027	142263-3	INDICATOR PANEL COMPLETE	1 PC.
029	SC03501140	ECCENTRIC SHAFT	1 PC.
030	SC07512110	BOLT HB5X50	4 PC.
031-1	942101-7	SPRING WASHER 5	4 PC.
032	SC03222700	FLANGE SET PLATE	1 PC.
033	SC04007620	LEAF SPRING	2 PC.
034	SC04007430	POSITION SPRING	2 PC.
035	SC07900010	STEEL BALL S4	2 PC.
036	SC03221200	INTERMEDIATE HOUSING	1 PC.
037	SC03251180	FLANGE	1 PC.
038	SC00000068	WASHER 4	4 PC.
039	SC07511060	BOLT HB4X22	4 PC.
040	SC00000050	BALL BEARING 6002RU	1 PC.
041-1	SC00000484	OIL SEAL MHS15257	1
042	SC00000061	HEX. BOLT 10X15	1 PC.
043	SC00000489	SEAL WASHER WF10171.6	1 PC.
044	SC03212300	BEARING HOUSING	1 PC.
045	SC04601440	LINER B	1 PC.
046	SC03500390	PISTON	3 PC.
047	SC04003020	PISTON RETURN SPRING	3 PC.
048-1	SC00000149	CHECK VALVE	3

049-1	SC00000468	CHECK VALVE SPRING	3 PC.	
050	SC03500540	METAL PACKING	3 PC.	
051	SC06505590	O RING S-8	3 PC.	
052	SC00000487	STOP RING H19	1 PC.	
053	SC00000465	NEEDLE BEARING HOLDER A T45421	1 PC.	
054	SC00000466	NEEDLE BEARING #RNAF81510	1 PC.	
055	SC00000467	NEEDLE BEARING HOLDER B T45422	1 PC.	
056	SC07100030	BALL BEARING 625	1 PC.	
057	SC00000020	MAGNET	2 PC.	
058	SC06505300	O RING S4	1 PC.	
059	SC03501420	RETURN VALVE	1 PC.	
060	SC00000097	HEX. SOCKET HEAD BOLT 6X20	2 PC.	
061	SC00000066	WASHER 6	14 PC.	
062	SC03206510	CYLINDER	1 PC.	
063	SC06505010	O RING P6	2 PC.	
064	SC06503240	BACK-UP RING G55	1 PC.	
065	SC06505180	O RING G55	1 PC.	
066-1	922102-1	HEX. SOCKET HEAD BOLT 4X6	2 PC.	
067	SC00000023	RELEASE VALVE SPRING	1 PC.	
068	SC00000481	STOPPER PLATE #45423	1 PC.	
069	SC00000032	VALVE RETURN SPRING	1 PC.	
070	SC00000462	RELEASE VALVE #T45461	1 PC.	
071	SC06505280	O RING P46	1 PC.	
072	SC06503230	BACK-UP RING P46	1 PC.	
073	SC03700080	KEY	1 PC.	
074	SC00000070	SPRING PIN 2.5X10	1 PC.	
075	SC03113600	CUTTER ROD	1 PC.	
076	SC00000059	HEX. SOCKET HEAD BOLT 5X12	2 PC.	
077	SC00000067	WASHER 5	4 PC.	
078	SC09002470	CUTTER BLADE SET	1 PC.	
079	SC04000320	RETURN SPRING FOR CUTTER ROD	1 PC.	
080	SC06505320	O RING P26	1 PC.	
081	SC06503190	BACK-UP RING P26	1 PC.	
082	SC09004930	OIL LEVELER SACK	1 PC.	
083	SC00000029	BUSH	1 PC.	
084	SC03104000	CUTTER HEAD	1 PC.	
085	922342-1	HEX. SOCKET HEAD BOLT M6X25	12 PC.	
086	SC03503890	STOPPER	1 PC.	
087	SC00000469	SPRING #T45470	1 PC.	
088	SC03500990	BOLT	1 PC.	
089	SC00000098	HEX. SOCKET HEAD BOLT 5X15	2 PC.	
090	SC06505310	O RING P22A	1 PC.	
091	SC03501400	BUSH HOLDER	1 PC.	
092-1	942201-3	SPRING WASHER 8	1 PC.	
093	SC00000034	WOOD SCREW 5X60	1 PC.	
094	SC03505780	PROTECTOR	1	
095	SC07610030	WASHER SW5	1 PC.	
096	SC07512010	BOLT HB5X5	1 PC.	
097	183C36-3	HOUSING SET	1 PC.	
	C10	263005-3	RUBBER PIN 6	2 PC.
	D10		INC. 1	
A01	SC00000103	HEX. WRENCH M3	1 PC.	
A02	SC00000104	HEX. WRENCH M4	1 PC.	
A03	SC00000105	HEX. WRENCH M5	1 PC.	
A04	783204-6	HEX. WRENCH 6	1 PC.	
A05	SC00000107	WRENCH 17-14	1 PC.	

A06	SC00000106 OIL 35CC	1 PC.
A07	SC09009190 PLASTIC TOOL CASE	1 PC.
A08	SC08016180 TOOL CASE LABEL	1 PC.