


PTX and JTX Pallet Trucks

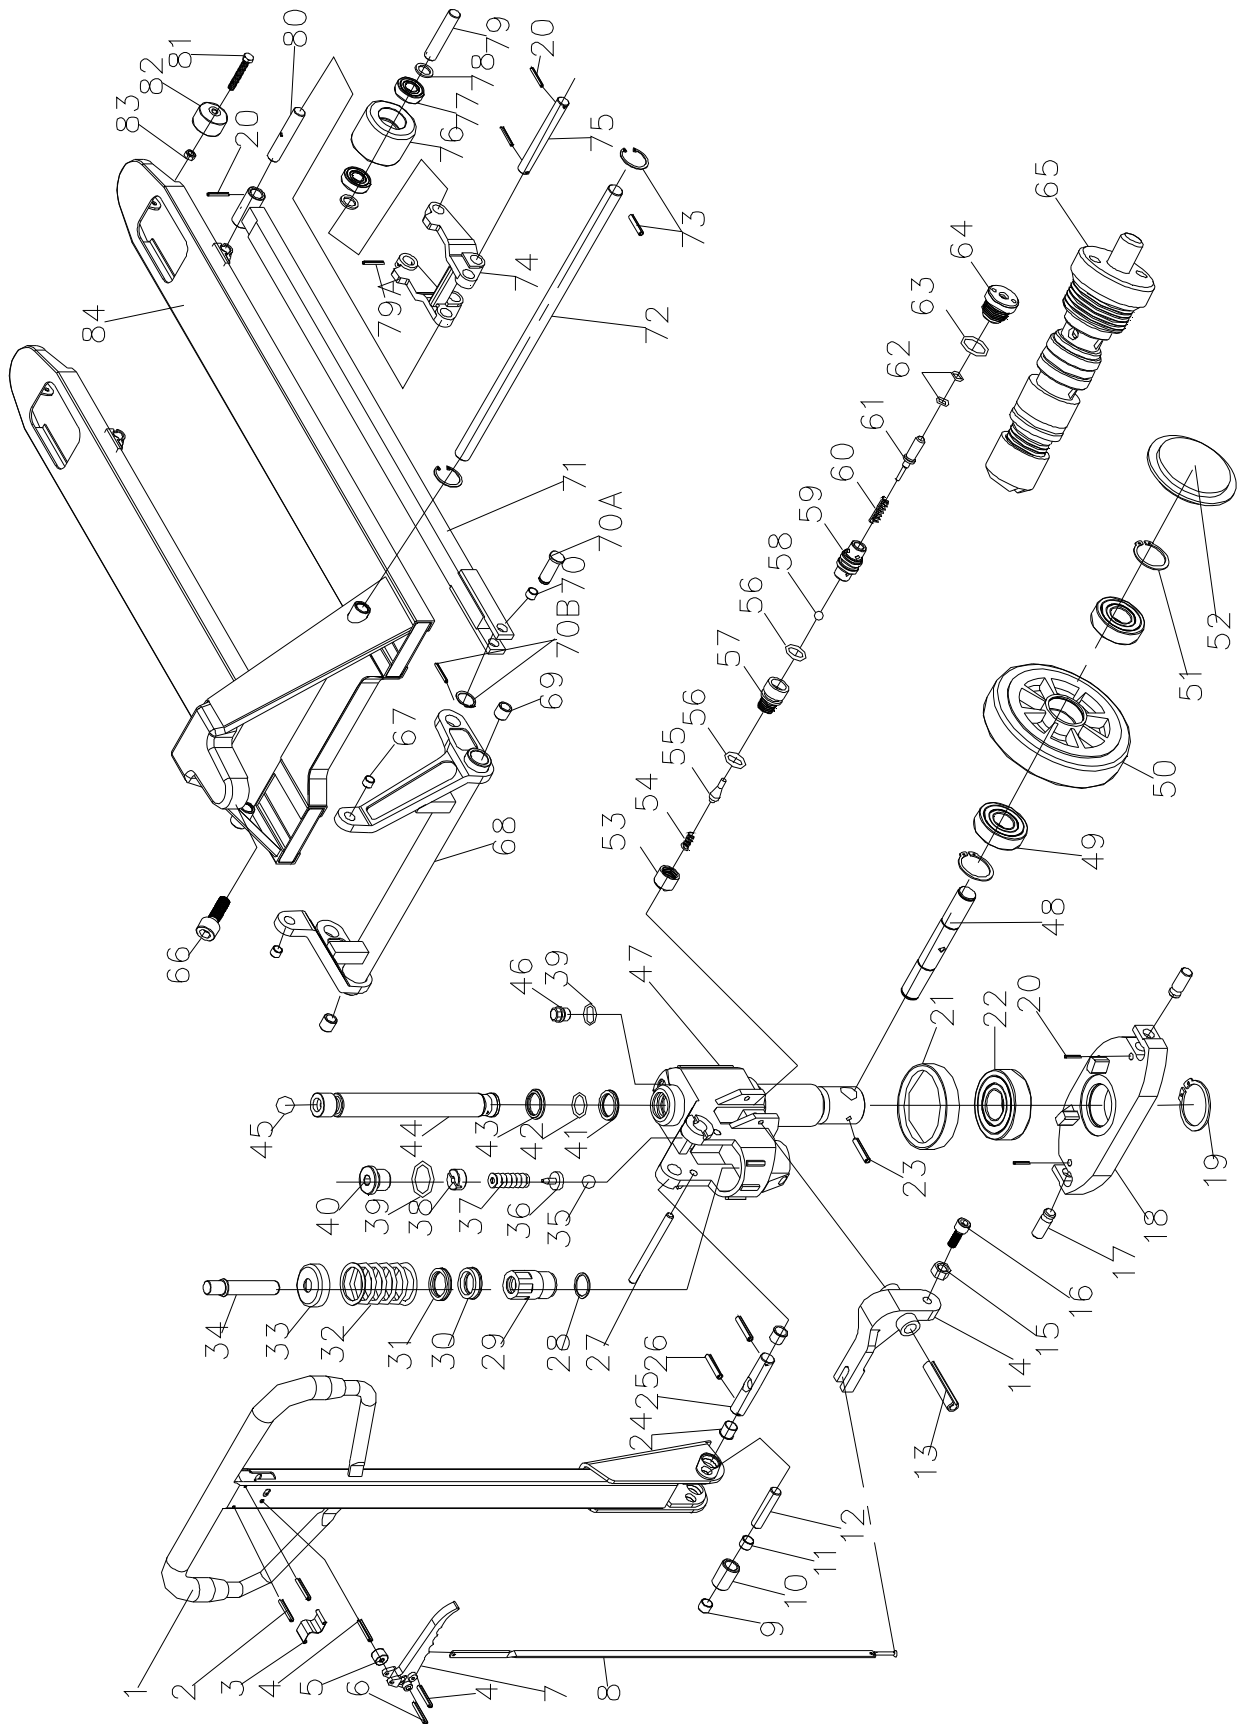

Parts List: JTX Pallet Truck

Index No.	Part No.	Description	Size	Qty
1	PTX2748-001	Handle		1
2	PTX2748-002	Spring Pin	Ø4 x 30 mm	2
3	PTX2748-003	Block Spring		1
4	PTX2748-004	Spring Pin	Ø4 x 22 mm	2
5	PTX2748-005	Roller	Ø14 x 10 mm	1
6	PT3348J-077	Spring Pin	Ø6 x 30 mm	1
7	PTX2748-008	Control Lever		1
8	JTX2748-009	Release Rod		1
9	PTX2748-010	Oil Lite Bushing	Ø15 x Ø17 x 20 mm	1
10	PTX2748-011	Roller	Ø25 x 36 mm	1
11	PTX2748-012	Oil Lite Bushing	Ø15 x Ø17 x 15 mm	1
12	PTX2748-013	Roller Pin	Ø15 x 65 mm	1
13	PTX2748-014	Spring Pin	Ø8 x 55 mm	1
14	PTX2748-015	Cam		1
15	TS-2311061	Hex Nut	M6	1
16	TS-1503051	Socket Head Cap Screw	M6 x 20	1
17	JTX2748-018A	Table Pin	Ø16 x 41 mm	2
18	JTX2748-019A	Table		1
19	PTX2748-020A	Snap Ring	50 mm	1
20	PT2748J-081	Spring Pin	Ø5 x 30 mm	8
21	PTX2748-022A	Bearing Base		1
22	PTX2748-023	Ball Bearing	51110	1
23	PT2748A-044	Spring Pin	Ø8 x 45 mm	1
24	PTX2748-027A	Oil Lite Bushing	Ø20 x Ø22 x 16 mm	2
25	PTX2748-028	Handle Pin	Ø20 x 100 mm	1
26	PTX2748-029	Spring Pin	Ø5 x 40 mm	2
27	PTX2748-030	Pump Retainer Pin	Ø8 x 100 mm	1
28	PTX2748-031A	Washer	Ø27 mm	1
29	PTX2748-032A	Plunger Housing		1
30	PTX2748-033A	U-Packing *	Ø26 x Ø18 x 5 mm	1
31	PTX2748-034A	Dust Seal Ring *	Ø26 x Ø18 x 6 mm	1
32	PTX2748-035	Spring		1
33	PTX2748-036	Spring Cap		1
34	PTX2748-037A	Plunger Piston	Ø18 x 101 mm	1
35	SB-6MM	Steel Ball	6 mm	1
36	PT2748A-030	Spring Base		1
37	PT2748A-030A	Spring		1
38	PTX2748-041	Release Screw		1
39	PTX2748-042	O-Ring *	11.8 x 2.65 mm	2
40	PTX2748-043	Pressure Adjust Screw		1
41	JTX2748-045A	U-Packing *	Ø35 x Ø45 x 6 mm	1
42	JTX2748-046A	O-Ring *	Ø34.5 x 2.65 mm	1
43	JTX2748-047	Dust Seal Ring *	Ø35 x Ø43 x 6.5 mm	1
44	JTX2748-048A	Ram Piston	Ø35 x 270 mm	1
45	SB-19	Steel Ball	19 mm	1
46	PTX2748-050	Oil Plug		1
47	JTX2748-051A	Pump Housing		1
48	JTX2748-052A	Wheel Shaft	Ø25 x 175 mm	1
49	BB-6204	Ball Bearing	6204	4
50	JTX2748-054	Steering Wheel	Ø200 x 50 mm	2
51	PT2748J-081A	Snap Ring	20 mm	4
52	PTX2748-056	Dust Seal Cap		2
53	PTX2748-057	Valve Cap		1
54	PTX2748-066	Needle Valve Spring		1
55	PTX2748-067	Needle Valve		1
56	PTX2748-071	O-Ring	13.2 x 2.65 mm	1

Index No.	Part No.	Description	Size	Qty
57	PTX2748-068	Needle Valve Base		1
58	SB-7MM	Steel Ball	7 mm	1
59	PTX2748-073	Mid-Valve Base		1
60	PTX2748-076	Release Nozzle Spring		1
61	PTX2748-077A	Release Nozzle	Ø10 x 44 mm	1
62	PTX2748-078A	O-Ring	7.5 x 1.8 mm	2
63	PTX2748-079	O-Ring	19 x 2.65 mm	1
64	PTX2748-080	Release Nozzle Housing		1
65	PTX2748-081	Valve Assembly		1
66	TS-1503041	Socket Head Cap Screw	M6x16	1
67	PTX2748-083	Bushing	Ø16 x Ø18 x 15 mm	2
68	JTX2748-084	Lifting Yoke		1
69	PTX2748-085	Oil Lite Bushing	Ø25 x Ø30 x 25 mm	2
70	JTX2748-086	Oil Lite Bushing	Ø18 x Ø22 x 20 mm	2
70A	JTX2748-086A	Crank Pin	Ø18 x 54 mm	2
70B	JTX2748-086B	Snap Ring	18 mm	2
71	JTX2748-087	Push Rod		2
72	JTX2748-088	Crank Shaft	Ø25 x 600 mm	1
73	JTX2748-089A	E-Ring	25 mm	2
74	JTX2748-090	Load Wheel Frame		2
75	JTX2748-092	Arm Pin	Ø20 x 156 mm	2
76	JTX2748-094	Load Wheel	Ø82 x 91 mm	2
77	JTX2748-095	Ball Bearing	6204	4
78	JTX2748-096A	Washer (JTX only)	Ø26 x 20 x 2 mm	4
79	JTX2748-097	Load Wheel Axle	Ø20 x 130 mm	2
79A	PT2748J-081	Spring Pin	5x30 mm	2
80	JTX2748-098	Rod Pin	Ø20 x 105 mm	2
81	TS-1490101	Hex Cap Screw	M8 x 55	2
82	PTX2748-100	Guide Roller	Ø50 x 37 mm	2
83	PT2748A-015	V-Nut	M8	2
84	JTX2748-102	Fork		1
85	JTX2748-103	Pump Assembly		1
86	JTX2748-104	Seal Kit (<i>includes items marked with *</i>)		1
87	JTX2748-105	Handle Assembly		1
88	JTX2748-106	Pump/Handle/Table/Wheel Assembly		1
	JTX2748-ID	I.D. Label (not shown)		1
	PT2748J-JET	JET Logo Label (not shown)		1
	PT2748J-PL	Pump Label (not shown)		1
	PTX2748-HL	Handle Label (not shown)		1

* indicates items in the Seal Kit (#86).