




Hydraulic Bottle Jacks

JHJ-8 (stock no. 453308)

JHJ-12-1/2 (stock no. 453312)

JHJ-12-1/2L (stock no. 453313K)

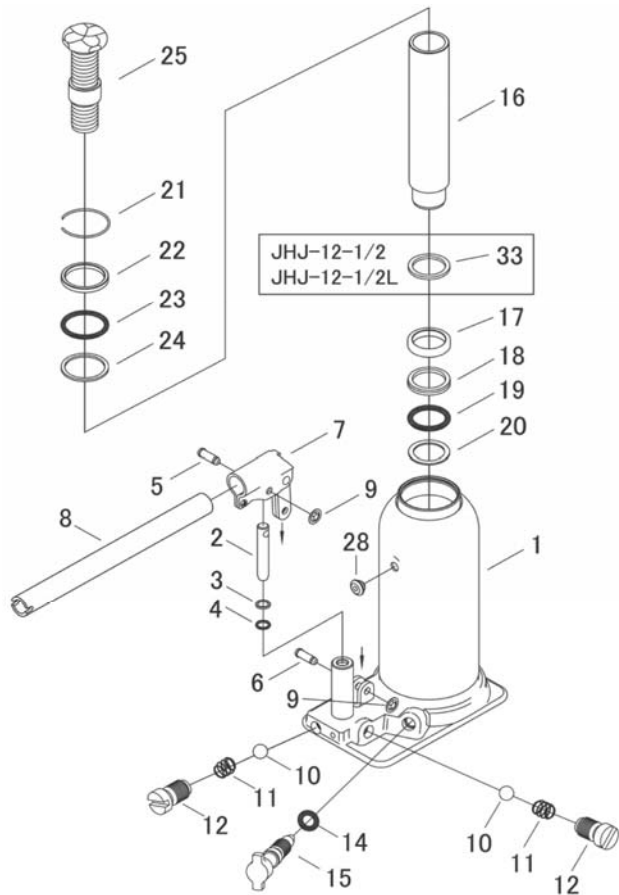

	JHJ-8	JHJ-12-1/2	JHJ-12-1/2L
Rated capacity	8 ton	12-1/2 ton	12-1/2 ton
Minimum height (in.)	7-7/8	9-1/2	6-3/4
Piston height (in.)	4-5/8	5-7/8	3-3/4
Head screw (h/in.)	2-3/4	3-1/8	3
Maximum height (in.)	15-1/2	18-1/2	13-3/8
Base size (LxW/in.)	6 x 3-1/2	6-1/2 x 4-1/8	6-1/2 x 4-1/8
Weight (lbs)	13	18	15

JHJ-8

JHJ008-RK	Repair Kit
JHJ008-02	Pump Plunger
JHJ008-03*	Pump Backup Ring (Ref JHJ005-03)
JHJ008-04*	Pump Packing
JHJ008-05G	Pump Plunger Pin
JHJ008-06G	Pump Stay Pin (Ref JHJ008-05)
JHJ008-07G	Handle Socket Assembly
JHJ008-08G	Handle 3pc.
JHJ008-09G	Pin Stopper Ring
JHJ008-10	Valve Ball (Ref SB-9/32)
JHJ008-11	Spring (Ref JHJ005-11)
JHJ008-12	Valve Plug (Ref JHJ005-12)
JHJ008-14*	Release Packing (JHJ001-14)
JHJ008-15	Release Assy Old (JHJ001-15)
JHJ008-15AG	Release Assy New (JHJ001-15A)
JHJ008-16	Ram
JHJ008-17	Ram Packing Seat
JHJ008-18*	Ram Backup Ring
JHJ008-19*	Ram Packing
JHJ008-20	Ram Packing Stopper
JHJ008-21	Snap Ring
JHJ008-22	Stuffing Ring
JHJ008-23*	Cylinder Packing
JHJ008-24	Stopper Ring (Ref JHJ008-22)
JHJ008-25G	Adjusting Screw Assembly
JHJ008-28G*	Oil Plug (Ref JHJ001-28)

JHJ-12-1/2 and JHJ-12-1/2L

JHJ012-RK	Repair Kit
JHJ012-02	Pump Plunger (Ref JHJ008-02)
JHJ012-03*	Pump Backup Ring (Ref JHJ005-03)
JHJ012-04*	Pump Packing (Ref JHJ008-04)
JHJ012-05G	Pump Plunger Pin (Ref JHJ008-05)
JHJ012-06G	Pump Stay Pin (Ref JHJ008-05)
JHJ012-07G	Handle Socket (Ref JHJ008-07)
JHJ012-08G	Handle 3pc. (Ref JHJ008-08)
JHJ012-08LPG	Handle 1pc
JHJ012-09G	Pin Stopper Ring (Ref JHJ008-09)
JHJ012-10	Valve Ball (Ref SB-9/32)
JHJ012-11	Spring (Ref JHJ005-11)
JHJ012-12G	Valve Plug (Ref JHJ005-12)
JHJ012-14*	Release Packing (Ref JHJ001-14)
JHJ012-15	Release Assy Old (Ref JHJ001-15)
JHJ012-15AG	Release Assy New (Ref JHJ001-15A)
JHJ012-16	Ram
JHJ012-16LP	Ram
JHJ012-17	Ram Packing Seat
JHJ012-18*	Ram Backup Ring
JHJ012-19*	Ram Packing
JHJ012-20	Ram Packing Stopper
JHJ012-21	Snap Ring
JHJ012-22	Stuffing Ring
JHJ012-22LP	Stuffing Ring
JHJ012-23*	Cylinder Packing
JHJ012-24	Stopper Ring (Ref JHJ012-22)
JHJ012-25G	Adjusting Screw Assembly
JHJ012-25LPG	Adjusting Screw Assembly
JHJ012-28G*	Oil Plug (Ref JHJ001-28)
JHJ012-33	Ring

* denotes part included in repair kit

Part No. M-453308

Revision H 01/2016

JET

a Division of JPW Industries, Inc.
427 New Sanford Rd.
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com