


MP38 Multi Purpose Saw UT-05057 05057-UT MP38 Multi Purpose Saw UT-05057 MP38 Multi Purpose
Saw - Air Cleaner

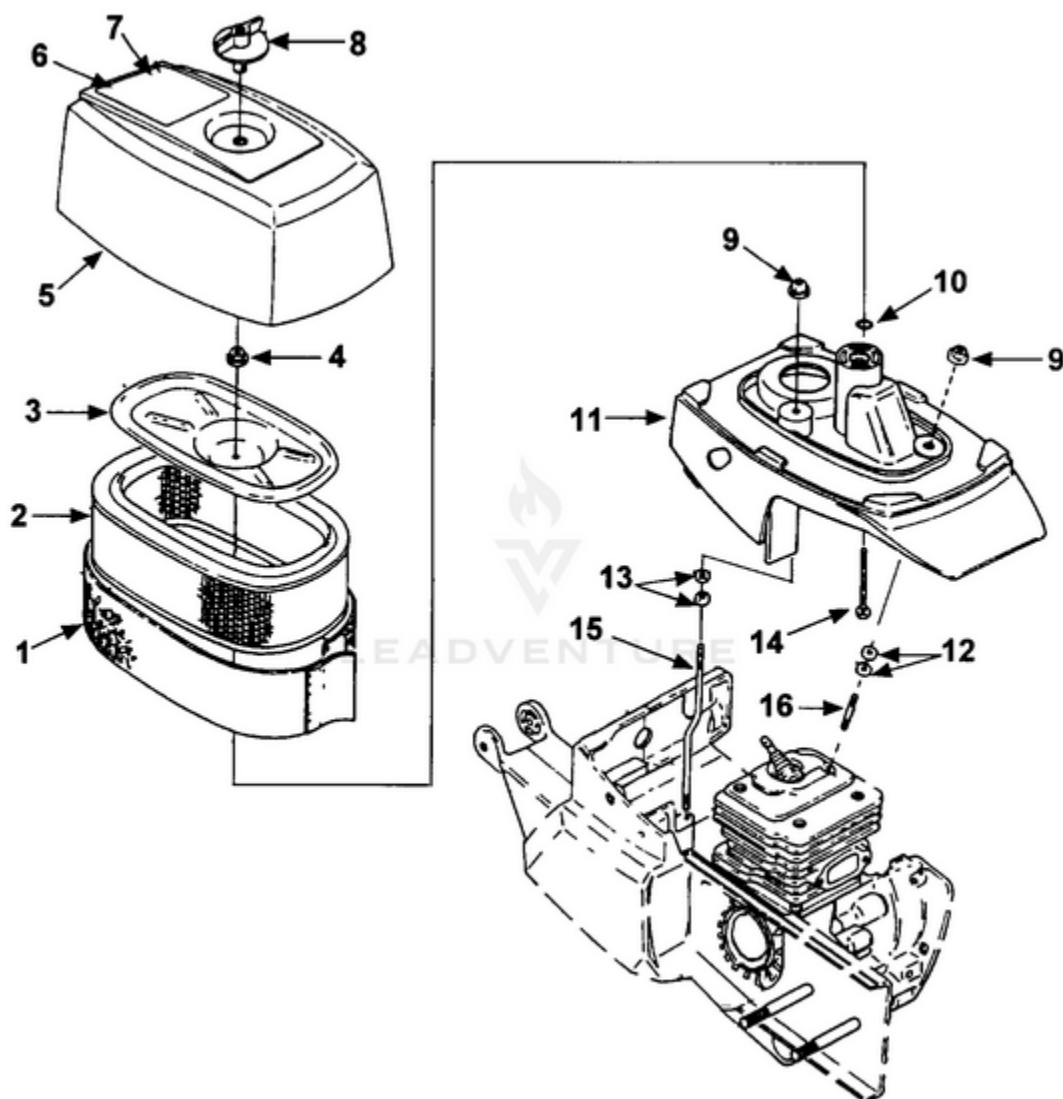

Rendered by LeadVenture, Inc.


Ref #	Part #	Description	Qty
1	02307	PREFILTER - Felt	1
2	02308	ELEMENT - Air Filter	1
3	023091	COVER - Air Filter Element	1
4	02330	NUT - Hex Conical	1
5	A03880A	COVER - Air Filter	1
6	03621	DECAL - Warning (French)	1
7	03620	DECAL - Warning (Eng)	1
	04644	DECAL - Warning (Int)	1
8	A03024	KNOB & INSERT	1
9	02330	NUT - Hex	2
10	03383	O-Ring	1
11	02303A	COVER - Cylinder	1
12	02425	SPACER - Insulating	2
13	81092	NUT - Hex	2
14	82584	SCREW - Hex Cap (10-24 x 1 3/4")	1
15	02347	STUD - Offset (10-24)	1
16	02346	STUD (10-24 x 1")	1

Diagram of the front of the boat showing the bow, cockpit, and various components labeled with numbers 15 through 25.



Ref #	Part #	Description	Qty
1	02300	GASKET - Foam (1/4")	1
2	02301	FILTER - Screen	1
3	02302	GASKET - Foam	1
4	A03272	ADAPTOR - Intake	1
5	82582	SCREW - Truss Hd (8-16 x 3-1/4")	2
6	03758	PAD - Foam	1
7	966201	SCREW - Torx (10-24 x 1/2")	1
8	A02315	CABLE - Throttle	1
9	02313A	BRACKET - Air Intake	1
10	82513	SCREW - Thread Form (6-19 x 1/2")	1
11	03455	BRACKET - Cable End	1
12	02295	GASKET - Carburetor	2
13	022961	ADAPTOR - Intake	1
14	02297	GASKET - Adaptor	1
15	82571	SCREW - Pan Hd (10-24 x 1")	3
16	9315719	TUBING, Pulse line (4-3/4")	1
17	A02298B	CARBURETOR - Walbro	1
	03757	GROMMET - Hi-Lo	1
18	A06369	CHOKE LINK & RETAINER	1
19	03333	BRACKET - Cable	1
20	02314	ROD - Choke	1
21	64862	GROMMET	1
22	A03556	GROUND WIRE	1
23	825561	SCREW - Truss Hd (10-24 x 1-1/4")	1
24	A03402A	TANK - Fuel	1
25	64862	GROMMET	1
26	A02294	FILTER SLEEVE	1
27	9477240	TUBING - Rubber (10")	1
28	A97700	USE UP06516	1
29	592531A	FILTER - Fuel	1
30	A00904A	CAP - Tank (w/Retainer)	1


MP38 Multi Purpose Saw UT-05057 05057-UT MP38 Multi Purpose Saw UT-05057 MP38 Multi Purpose Saw - Clutch
- Exhaust System

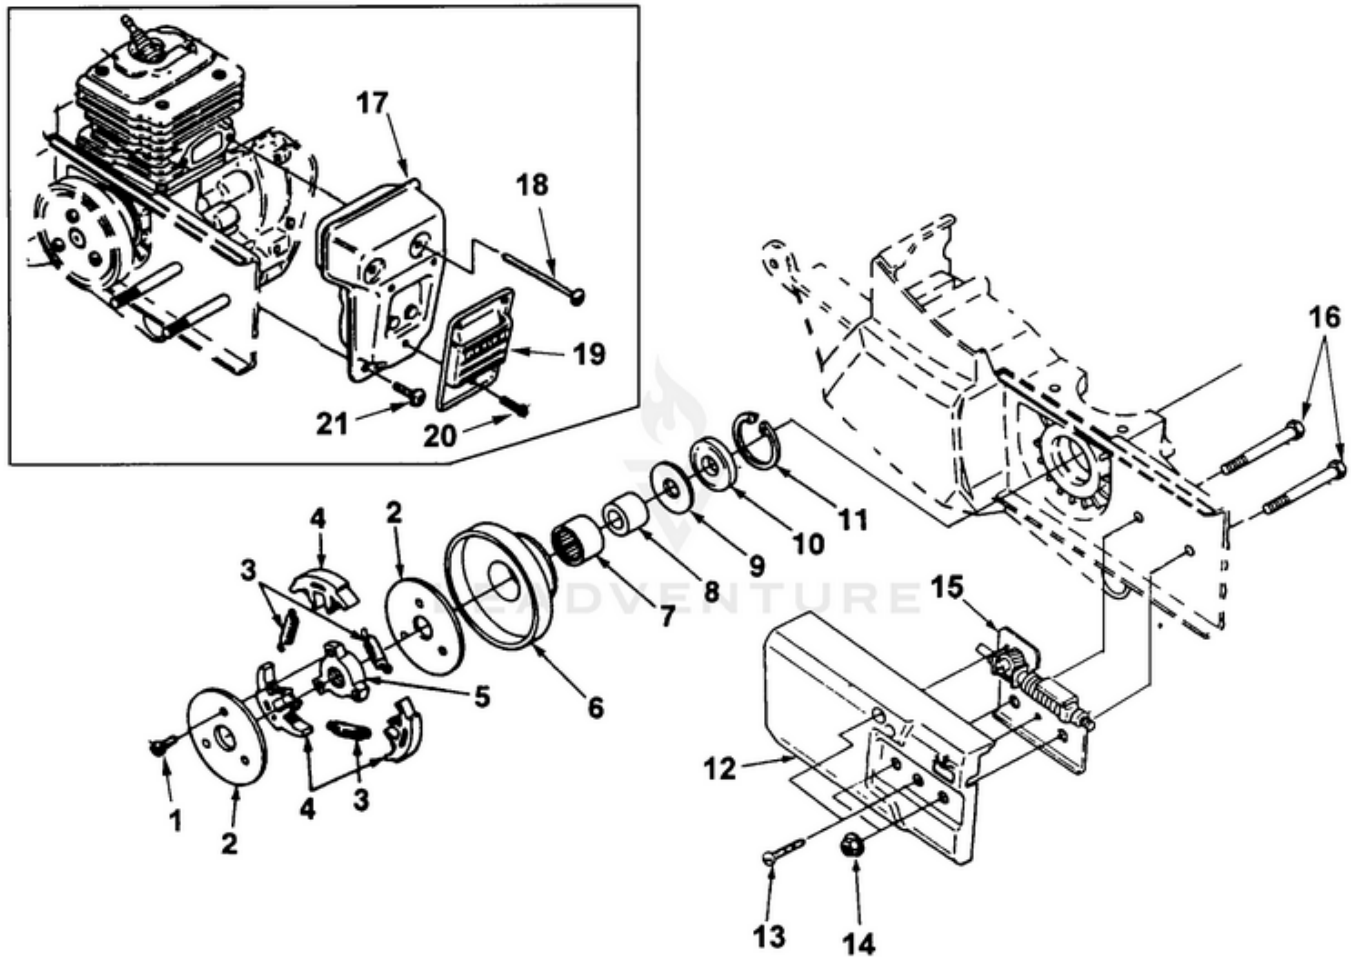

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	82253	SCREW - Machine Hex Hd (8-32 x 3/8")	3
2	93628	COVER - Clutch	2
3	93638A	SPRING - Clutch	3
4	79239	SHOE - Clutch	3
5	02334	CLUTCH - Spider	1
6	A49543	PULLEY - Drum & Bearing	1
7	46071	BEARING - Needle	1
8	46070	RACE - Inner	1
9	46135	WASHER - Thrust	1
10	98197A	SEAL - Main	1
11	289221	RETAINER - Bearing	1
12	A02329A	CLUTCH - Cover	1
13	82575	SCREW - Taptite (8-32 x 5/8")	2
14	81282	NUT - Hex Flange (5/16-18)	2
15	A03879A	GEAR KIT	1
16	02327	BOLT - Wheel Arm	1
17	A02287	MUFFLER	1
18	82574	SCREW - Truss Hd (10-24 x 2 1/2")	2
19	A98747	CAP - Muffler	1
20	80983	SCREW - Machine Hex Hd (8-32 x 1/2")	3
21	966201	SCREW - Torx (10-24 x 1/2")	2


MP38 Multi Purpose Saw UT-05057 05057-UT MP38 Multi Purpose Saw UT-05057 MP38 Multi Purpose
Saw - Engine Internal

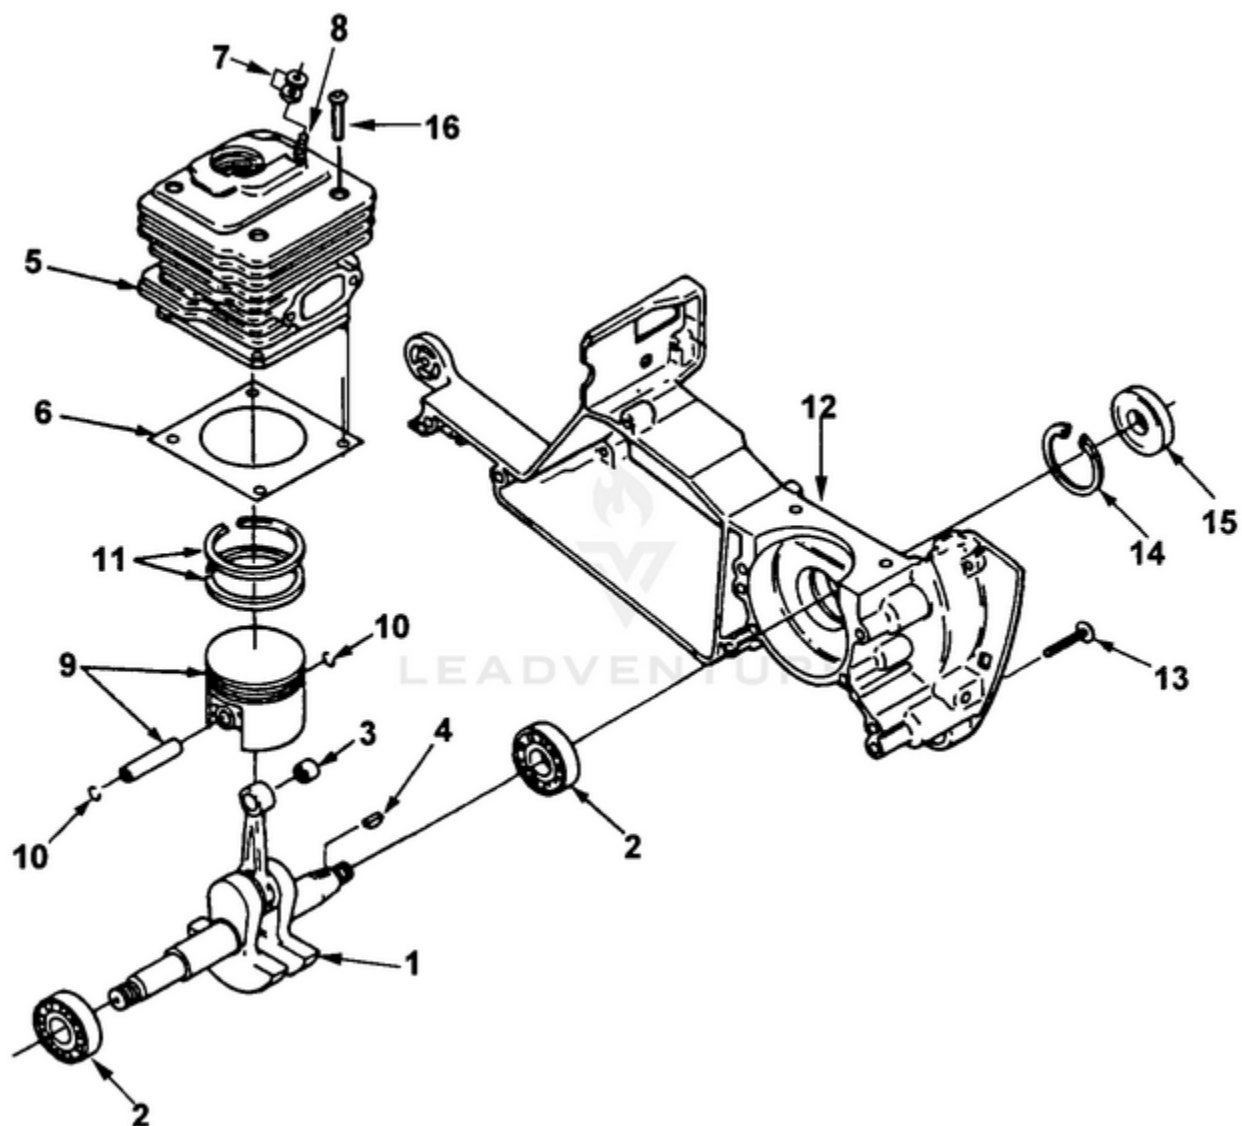

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A03883	CRANKSHAFT	1
2	987971	BEARING - Ball	2
3	02151A	BEARING - Piston Pin	1
4	75078	KEY - Woodruff	1
5	A03881	CYLINDER & PISTON ASSEMBLY	1
6	01568	GASKET - Cylinder	1
7	02425	SPACER	2
8	02346	STUD - (10-24 x 1-1/4")	5
9	A01273	PISTON (1.890 Dia)	1
10	02161	RING - Retaining	2
11	02162	RING - Piston	2
12	A02272B	CRANKCASE	1
13	825561	SCREW - Truss Hd (10-24 x 1-1/4")	9
14	289221	RETAINER - Bearing	1
15	98197A	SEAL - Main	2
16	82580	SCREW - Pan Hd (12-24 x 3/4")	4


MP38 Multi Purpose Saw UT-05057 05057-UT MP38 Multi Purpose Saw UT-05057 MP38 Multi Purpose
Saw - Handles

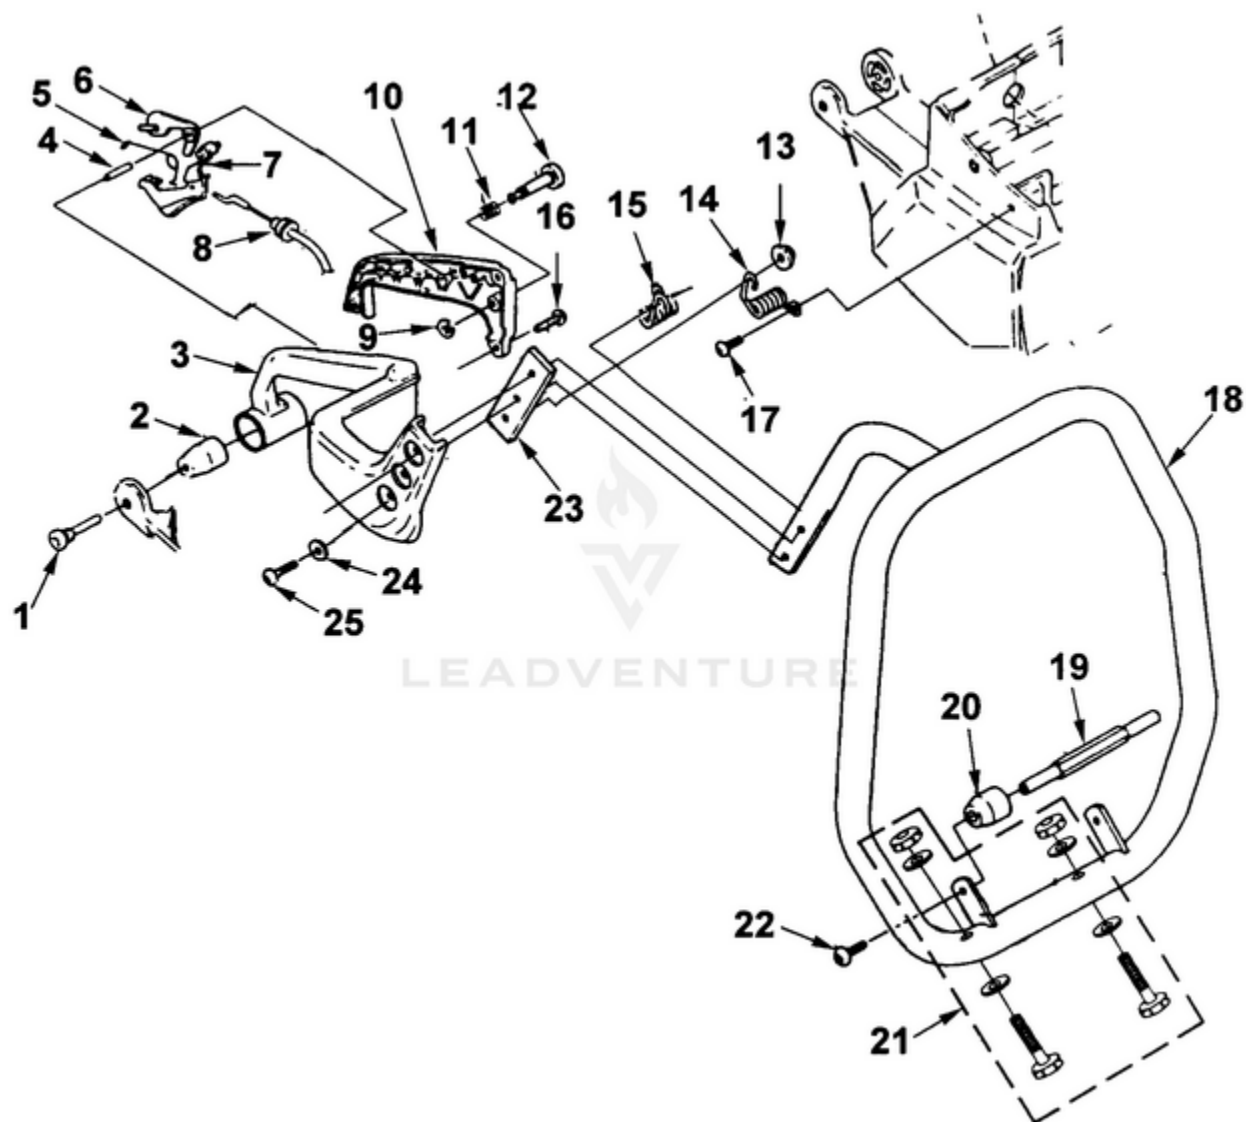

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	93367	ISOLATOR PIN	3
2	93368A	ISOLATOR - Vibration	2
3	02318	HANDLE - Rear	1
4	68548	PIN - Trigger	1
5	02316	SPRING - Throttle	1
6	93385A	LOCK - Trigger	1
7	A03806A	TRIGGER & SWIVEL	1
8	A02315	CABLE - Throttle	1
9	58409	RING - Retaining	1
10	02319	COVER - Handle	1
11	95020	SPRING - Compression	1
12	95671	PIN - Throttle Lock	1
13	02330	NUT - Hex (10-24)	1
14	PS03535	SPRING - Isolation (Large)	1
15	PS03536	SPRING - Isolation (Small)	1
16	82536	SCREW - Plastite (8-16 x 5/8")	4
17	966201	SCREW - Torx Hd. (10-24 x 1/2")	4
18	A08326	HANDLE BAR	1
19	02277A	SPACER	1
20	973051A	ISOLATOR - Vibration	2
21	A03633	KIT - Wear Pad	1
22	966201	SCREW - Torx Hd. (10-24 x 1/2")	2
23	03078	STRAP, Reinforcing	2
24	95935	WASHER (#12-11/16)	3
25	825551	SCREW - Truss Hd. (10-24 x 3/4")	3


MP38 Multi Purpose Saw UT-05057 05057-UT MP38 Multi Purpose Saw UT-05057 MP38 Multi Purpose
Saw - Starter - Ignition

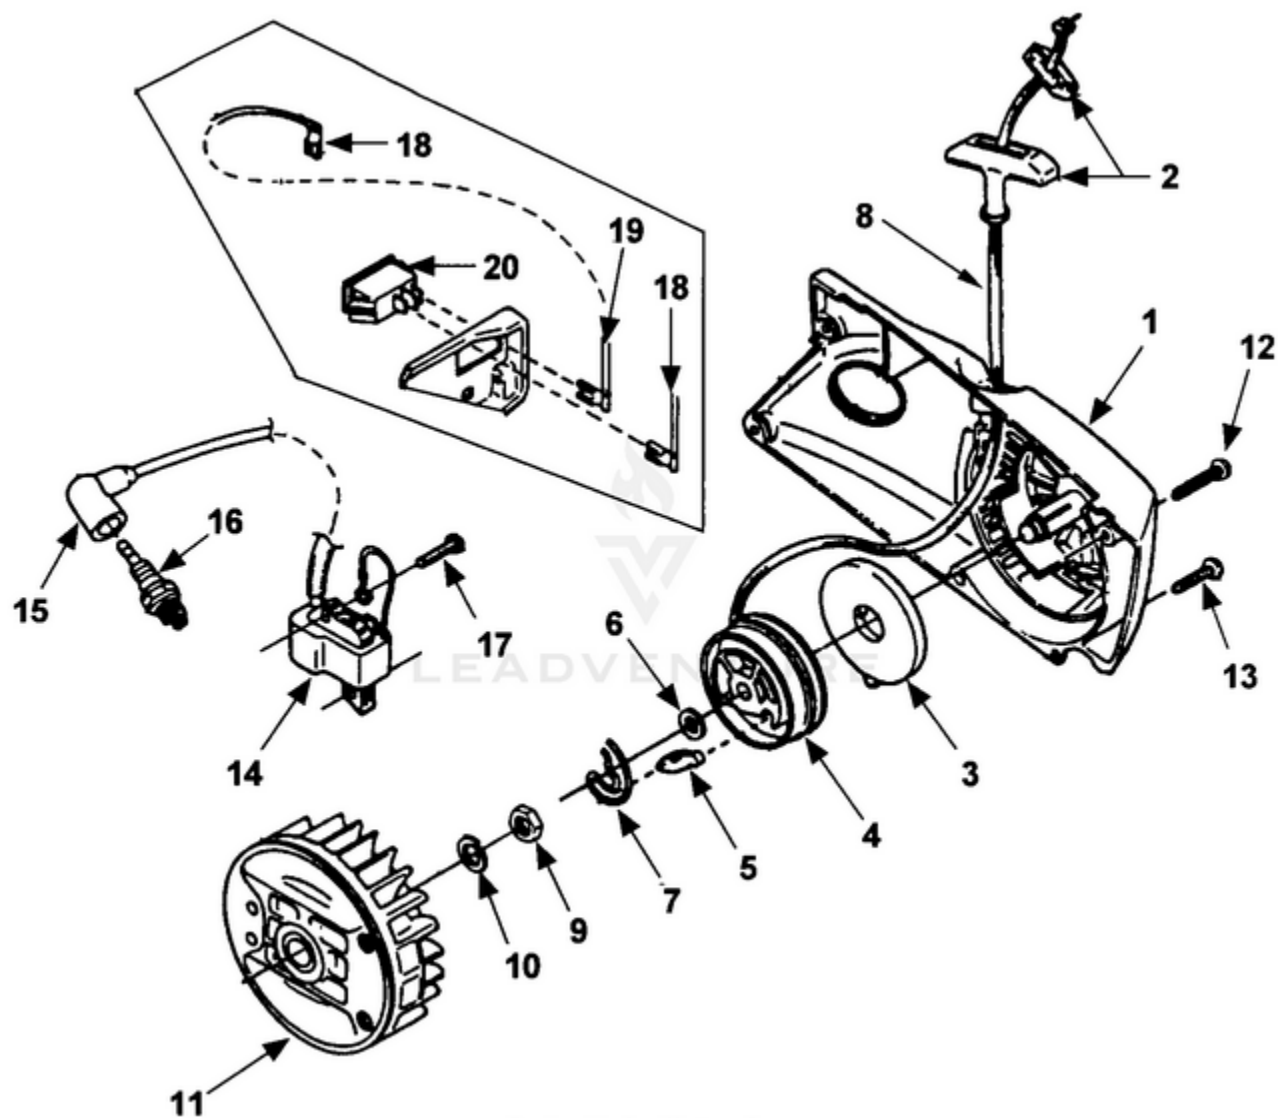

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A03884A	STARTER	1
2	A69962B	GRIP - Starter	1
3	A97908	SPRING & CONTAINER	1
4	A03882	PULLEY ASSEMBLY	1
5	01274	WASHER - Thrust	1
6	98332A	PAWL - Starter	1
7	03750B	CLIP - Retainer	1
8	PS97500	ROPE - Starter (45")	1
9	81124A	NUT - Jam (3/8-24)	1
10	83102	WASHER - Lock (3/8")	1
11	02152A	ROTOR	1
12	825561	SCREW - Truss Hd (10-24 x 1-1/4")	1
13	825551	SCREW (10-24 x 3/4")	3
14	A03748A	IGNITION MODULE (Sems/Walbro)	1
15	A02597	SPARK PLUG BOOT KIT	1
16	93561S	SPARK PLUG (CJ6Y)	1
	98217S	SPARK PLUG (RCJ6Y) Resistor	1
17	82575	SCREW - Pan Hd (8-32 x 5/8")	2
18	A03556	GROUND WIRE	1
19	A02284	IGNITION GROUND WIRE	1
20	01802	SWITCH	1

MP38 Multi Purpose Saw UT-05057 05057-UT MP38 Multi Purpose Saw UT-05057 MP38 Multi Purpose Saw -
Wheel Arm Assembly

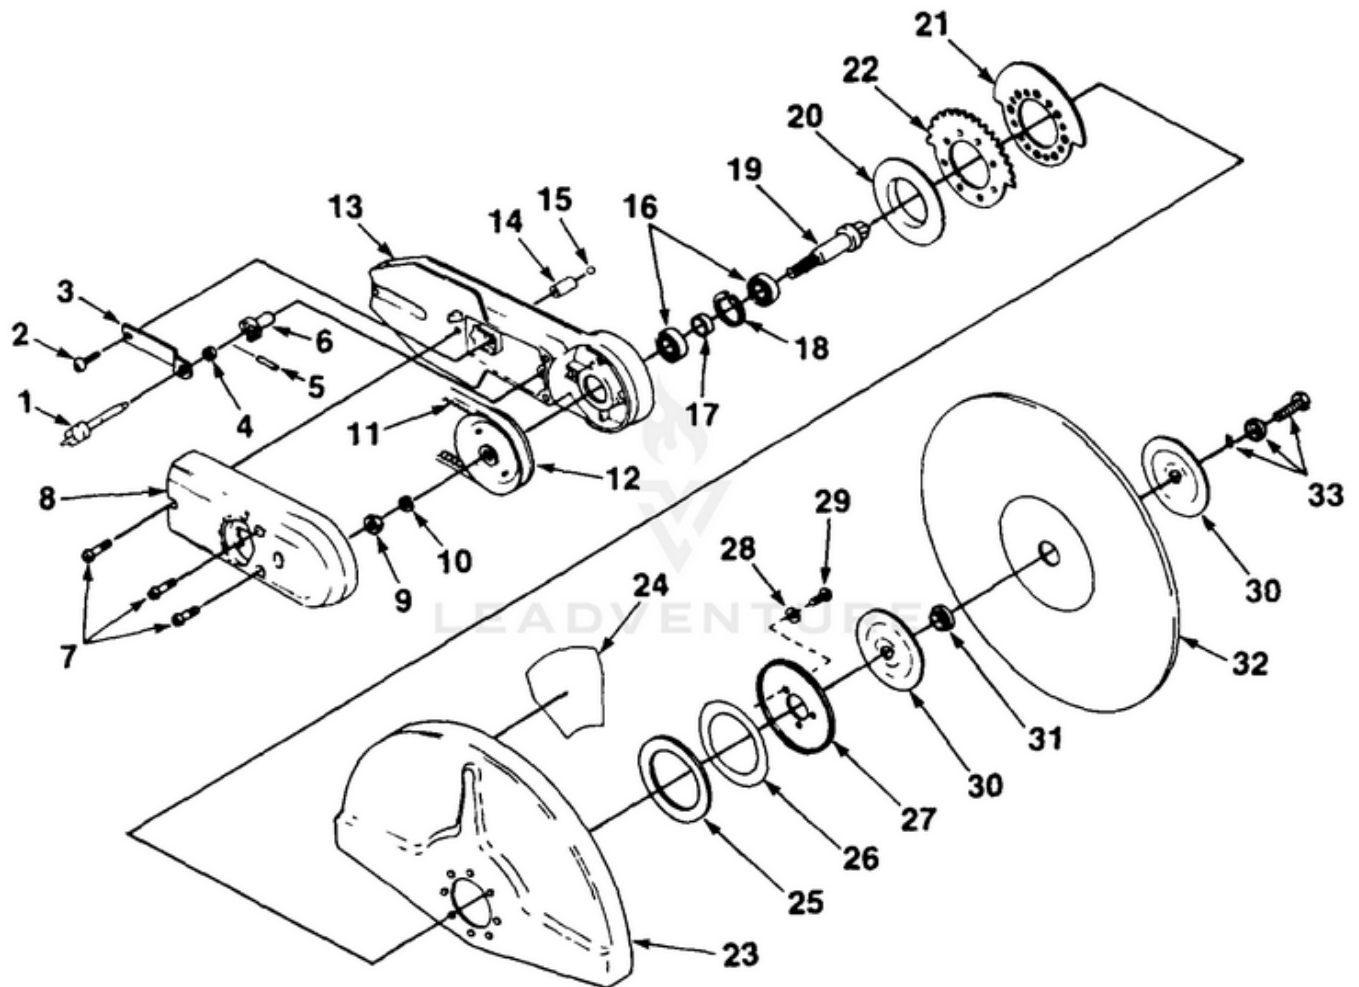

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A00660	KNOB & PIN	1
2	966201	SCREW - Truss Hd (10-24 x 1/2")	1
3	01923	PLATE Spring	1
4	01922	SPACER - Adjusting Pin	1
5	JA461359	PIN - Roll 1	1
6	01921	SLEEVE - Cam	1
7	95792	SCREW - Round Hd (10-24 x 23/32")	3
8	07704	BELT - Cover	1
9	02423	NUT - Hex	1
10	JA446148	WASHER - Lock (7/16)	1
11	46068	BELT - V-Drive	1
12	A02891	PULLEY & HUB	1
13	076563A	ARM - Wheel	1
14	02267	SNUBBER	1
15	00568	STEEL BALL	1
16	63107	BEARING - Ball	2
17	01916	SPACER - Bearing	1
18	PS31746	RING - Retaining	1
19	019061	SHAFT - Wheel	1
20	01915	COLLAR - Wheel Guard	1
21	01914A	PAD - Adjuster	1
22	01913	DETENT - Adjuster	1
23	A04647A	WHEEL GUARD & DECAL - 12"	1
24	04645A	DECAL - Caution	1
23	A07696	WHEEL GUARD & DECAL - 14"	1
24	04645A	DECAL - Caution	1
25	01912	WASHER - Rubber	1
26	0191101	SHIM - .020"	1
26	0191102	SHIM - .030"	0
27	01910	WASHER - Spring	1
28	95935	WASHER (#12 - 11/16)	3
29	966201	SCREW - Truss Hd (10-24 x 1/2")	3
30	019091A	FLANGE - Wheel	1
31	01902	SPACER (1")	1
	01903	SPACER (22mm)	1
	01907	SPACER (20mm)	1
32		WHEEL	1
33	A03412	BOLT & WASHER	1

No
Diagram
Available



LEADVENTURE

Parts List
Only

Ref #	Part #	Description	Qty
	19188	Combination Wrench (1/2, 3/4, & Screwdriver)	
	03000	1/2 Wrench	
	A17106B	Puller Rotor	

No
Diagram
Available



LEADVENTURE

Parts List
Only

Ref #	Part #	Description	Qty
	64596C	Masonry and Concrete 12 Inch Abrasive Wheel - Arbor Size: 1"	
	42330B	Masonry and Concrete 12 Inch Abrasive Wheel - Arbor Size: 7/8"	
	49826	Masonry and Concrete 12 Inch Abrasive Wheel - Arbor Size: 20mm	
	49559A	Masonry and Concrete 14 Inch Abrasive Wheel - Arbor Size: 1"	
	49765A	Masonry and Concrete 14 Inch Abrasive Wheel - Arbor Size: 20mm	
	64597C	Metal 12 Inch Abrasive Wheel - Arbor Size: 1"	
	43232B	Metal 12 Inch Abrasive Wheel - Arbor Size: 7/8"	
	49824	Metal 12 Inch Abrasive Wheel - Arbor Size 20mm	
	49561A	Metal 14 Inch Abrasive Wheel - Arbor Size 1"	
	49768A	Metal 14 Inch Abrasive Wheel - Arbor Size 20mm	
	68421B	Ductile and Cast Iron 12 Inch Abrasive Wheel - Arbor Size 1"	
	43231B	Ductile and Cast Iron 12 Inch Abrasive Wheel - Arbor Size 7/8"	
	49825	Ductile and Cast Iron 12 Inch Abrasive Wheel - Arbor Size 20mm	
	49560A	Ductile and Cast Iron 14 Inch Abrasive Wheel - Arbor Size 1"	
	49767A	Ductile and Cast Iron 14 Inch Abrasive Wheel - Arbor Size 20mm	
	03707A	Asphalt 12 Inch Abrasive Wheel - Arbor Size 1"	
	03696A	Asphalt 14 Inch Abrasive Wheel - Arbor Size 1"	
	A49753A	Premium Segmented Rim 12 Inch Diamond Wheel - Arbor Size 1"	
	A04831A	Premium Segmented Rim 14 Inch Diamond Wheel - Arbor Size 1"	
	A49751A	Standard Segmented Rim 12 Inch Diamond Wheel - Arbor Size 1"	
	A49572A	Standard Segmented Rim 14 Inch Diamond Wheel - Arbor Size 1"	
	08831	Carbide, Junkyard Dog(TM) Saw Blade - Arbor Size 1"	

Ref #	Part #	Description	Qty
	A08337A	12" Wheel Arm w/ 1" Arbor - Replacement Arm Assembly	
	A08338A	14" Wheel Arm w/ 1" Arbor - Replacement Arm Assembly	
	UT05064	Dolly kit w/ Depth Gage	
	A18009A	Carry Case with Insert	
	A49649	NLA(NO LONGER AVAILABLE)	
	98827	Spark Arrestor Screen	